


## การตั้งค่า UPnP บน ZTE F688

1. พิมพ์ 192.168.1.1 ที่ Browser แล้วกด Enter

- Username = admin
- Password = กรอกตามรูปในช่อง Default Router Password (ZTE แต่ละตัวไม่เหมือนกัน)
- จากนั้นกดปุ่ม Login

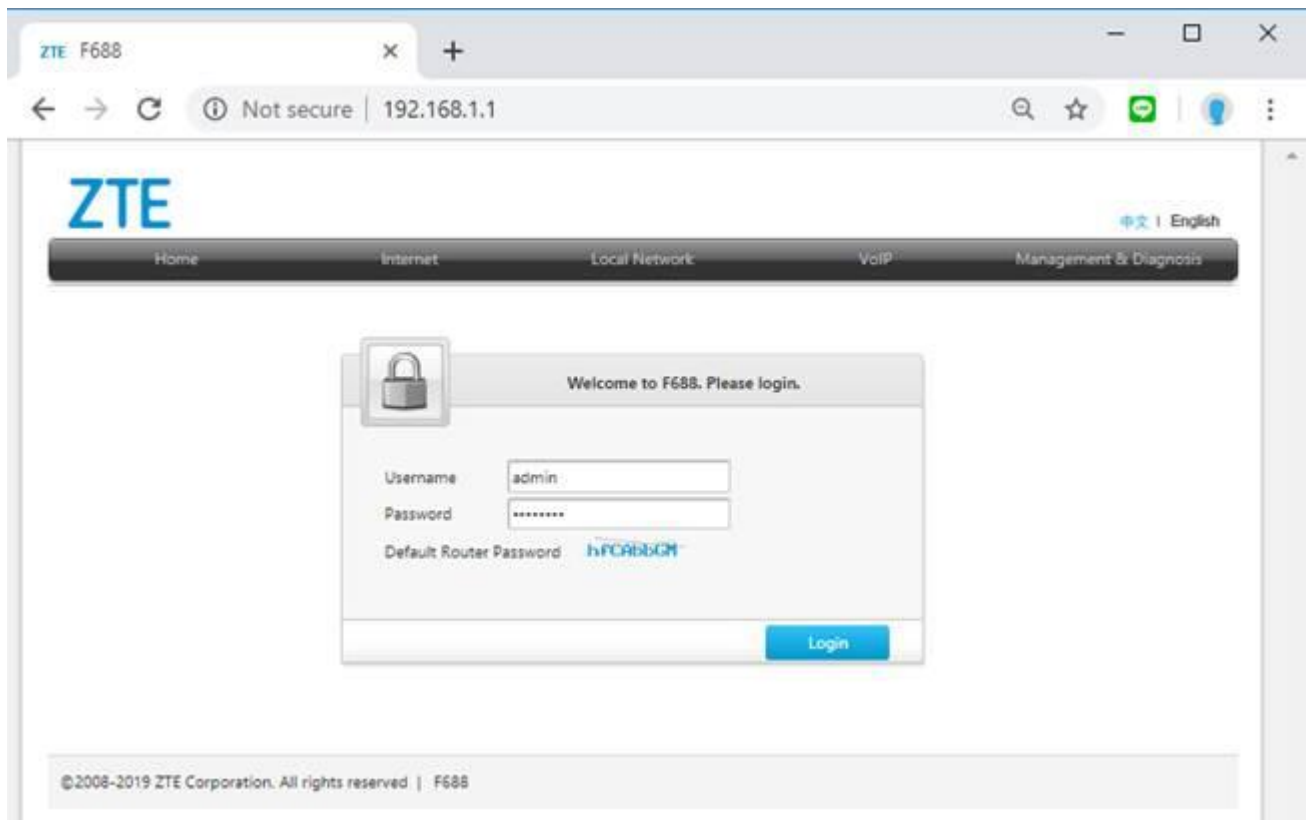

## 2. ตั้งค่าดังนี้

- ไปที่แถบ Local Network
- เมฆซ้ายมือ เลือก UPnP
- UPnP : เลือก On เพื่อเปิดใช้งาน
- ตั้งค่าเรียบร้อยแล้ว กดปุ่ม Apply

The screenshot shows the ZTE web management interface. At the top, there is a navigation bar with tabs for Home, Internet, Local Network (selected), VoIP, and Management & Diagnosis. A sidebar on the left contains a menu with items: Status, WLAN, LAN, Routing, UPnP (selected), and DNS. The main content area is titled 'Page Information' and contains a section for 'UPnP' configuration. The 'UPnP' section is expanded, showing a radio button for 'On' (selected) and 'Off'. Below this, the 'IPv4' section is visible, with 'Advertisement Period' set to 30 min and 'Advertisement Time To Live' set to 4 hop. At the bottom right of the configuration area, there are 'Apply' and 'Cancel' buttons. Red numbered callouts (1-4) are placed on the interface to guide the user through the steps: 1. Local Network tab, 2. UPnP menu item, 3. UPnP On radio button, 4. Apply button.

©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T9