


## การตั้งค่า DMZ บน ZTE F688

1. พิมพ์ 192.168.1.1 ที่ Browser แล้วกด Enter

- Username = admin
- Password = กรอกตามรูปในช่อง Default Router Password (ZTE แต่ละตัวไม่เหมือนกัน)
- จากนั้นกดปุ่ม Login

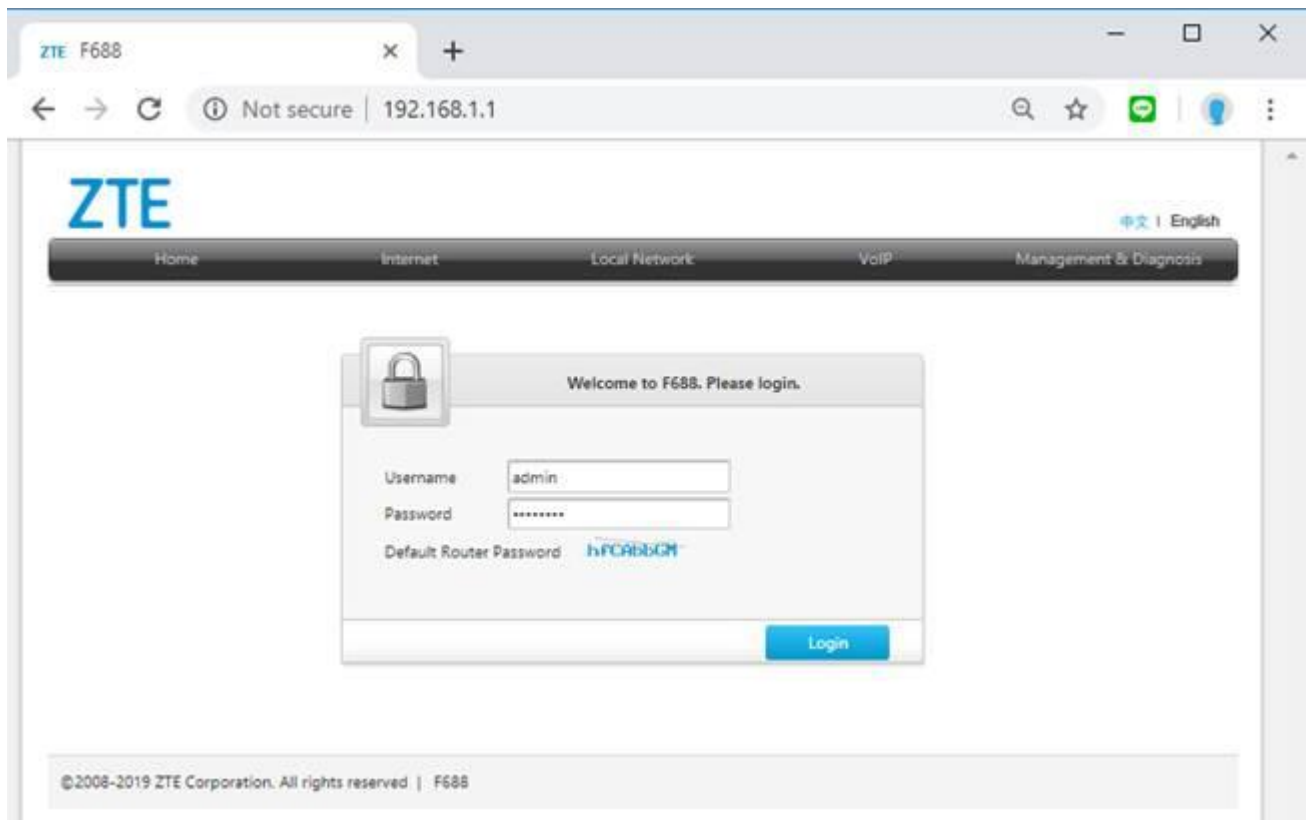

2. ตั้งค่าดังนี้ (การตั้งค่า DMZ คือการตั้งค่า Forward Port ให้กับ 1 IP Address ให้สามารถใช้ได้ทุก Port)

- ไปที่แถบ Internet
- เมนูซ้ายมือ เลือก Security
- เลือกแถบ DMZ
- DMZ : เลือก On เพื่อเปิดใช้งาน การตั้งค่า Forward Port แบบอัตโนมัติ
- WAN Connection : เลือก Auto
- LAN Host : ใส่ IP Address ของอุปกรณ์ที่ต้องการตั้งค่า Forward Port
- กดปุ่ม Apply

The screenshot shows the ZTE router's web management interface. At the top, the 'Internet' menu is selected (1). On the left sidebar, 'Security' is selected (2). In the main content area, the 'DMZ' tab is active (3). The DMZ configuration section shows the 'DMZ' radio button set to 'On' (4), 'WAN Connection' set to 'Auto' (5), and 'LAN Host' set to '192.168.1.108' (6). The 'Apply' button is highlighted with a red circle (7).

©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T9

3. เมื่อกดปุ่ม Apply แล้ว จะมีข้อความแจ้งว่าบันทึกค่าเรียบร้อยแล้ว

The screenshot shows the ZTE router's web management interface. At the top, the ZTE logo is on the left, and the current time is 1970-01-01T00:47. On the right, there are links for 'admin', 'Logout', and language options '中文' and 'English'. Below this is a navigation bar with tabs for 'Home', 'Internet', 'Local Network', 'VoIP', and 'Management & Diagnosis'. The 'Internet' tab is active, and within it, the 'DMZ' sub-tab is selected. A left-hand menu lists various system settings like 'Status', 'Security', 'DDNS', etc. The main content area shows 'Page Information' and a description of the DMZ function. A green success message box with a checkmark icon and the text 'Your data have been stored!' is highlighted with a red circle. Below the message, the DMZ configuration is shown with 'DMZ' set to 'On', 'WAN Connection' set to 'Auto', and 'LAN Host' set to '192.168.1.108'. 'Apply' and 'Cancel' buttons are at the bottom right of the configuration area. The footer contains copyright information: '©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T9'.