



การตรวจสอบหน้า LAN ของ GPON ZTE F668

1. เปิด Browser พิมพ์ URL ไปที่ <http://192.168.1.1> ที่ช่อง Address กด Enter หลังจากนั้นจะขึ้นหน้า
 เพจของ ZTE ให้พิมพ์ Username = admin และ Password = password และ กด Login

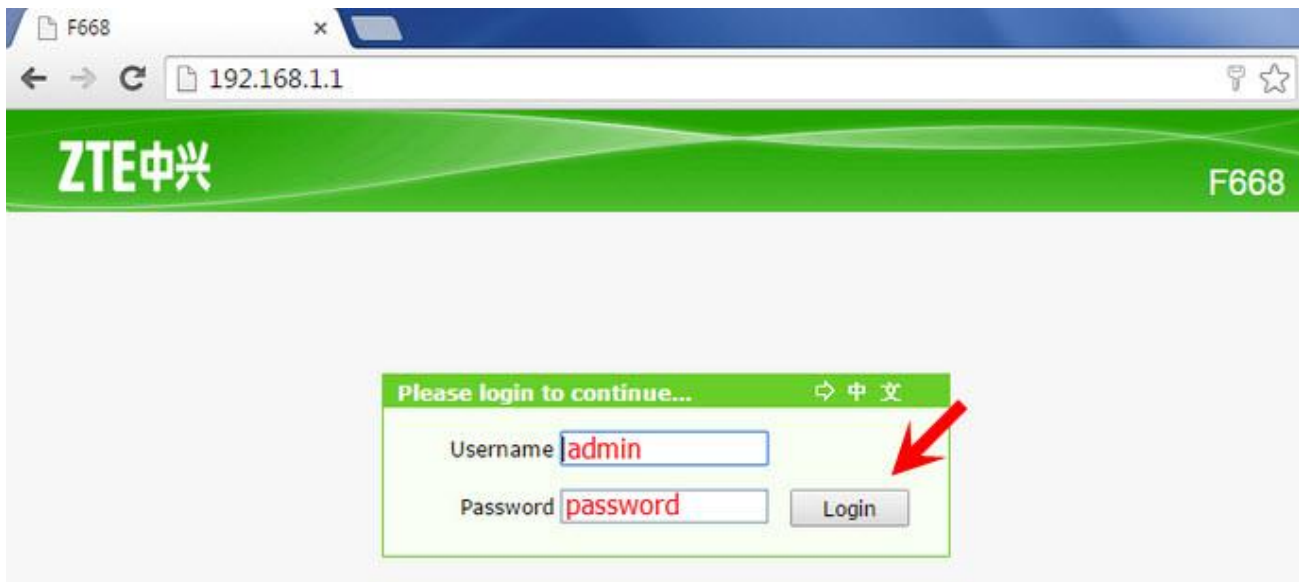

2. หลังจาก Login เข้ามาแล้วหน้าแรกจะแสดงดังรูป คลิก **Network**

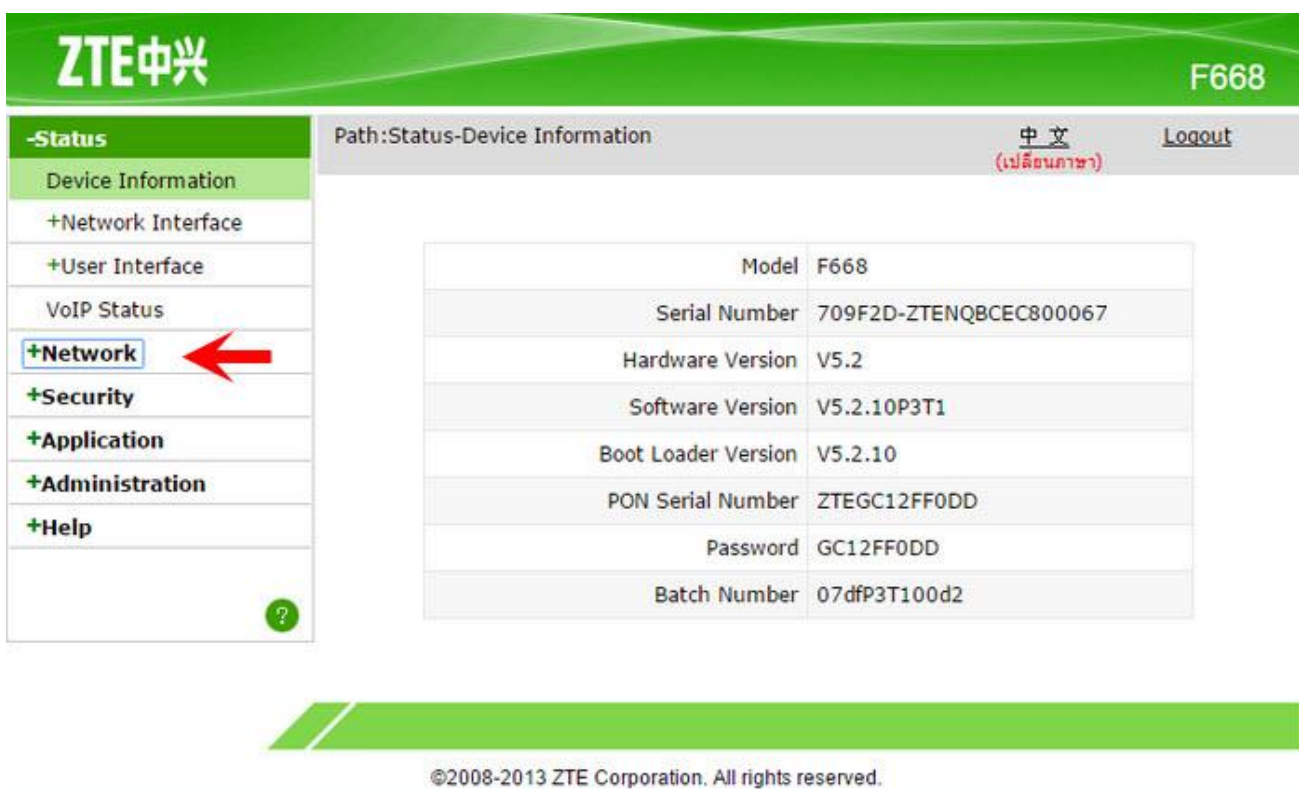

3. ไปที่เมนู LAN และเมนู DHCP Server จะแสดงดังรูป (Allocated Address จะหมายถึงเครื่อง clients ที่เข้ามาเชื่อมต่อด้วย)

ZTE中兴 F668

Path: Network-LAN-DHCP Server 中文 Logout

+Status

-Network

- +WAN
- +WLAN
- LAN** ←
- DHCP Server ←
- DHCP Server(IPv6)
- DHCP Binding
- DHCP Port Service
- Prefix Management
- DHCP Port Service(IPv6)
- RA Service
- +PON
- +Routing(IPv4)
- +Routing(IPv6)
- Port Locating
- +Security**
- +Application**
- +Administration**
- +Help**

NOTE:
The DHCP Start IP Address and DHCP End IP address should be in the same subnet as the LAN IP.

LAN IP Address

Subnet Mask

Enable DHCP Server

DHCP Start IP Address

DHCP End IP Address

Assign IspDNS

DNS Server1 IP Address

DNS Server2 IP Address

DNS Server3 IP Address

Default Gateway

Lease Time sec

Allocated Address

MAC Address	IP Address	Remaining Lease Time	Host Name	Port
There is no data.				