


การตั้งค่า DDNS บน ZTE F688

1. พิมพ์ 192.168.1.1 ที่ Browser แล้วกด Enter

- Username = admin
- Password = กรอกตามรูปในช่อง Default Router Password (ZTE แต่ละตัวไม่เหมือนกัน)
- จากนั้นกดปุ่ม Login

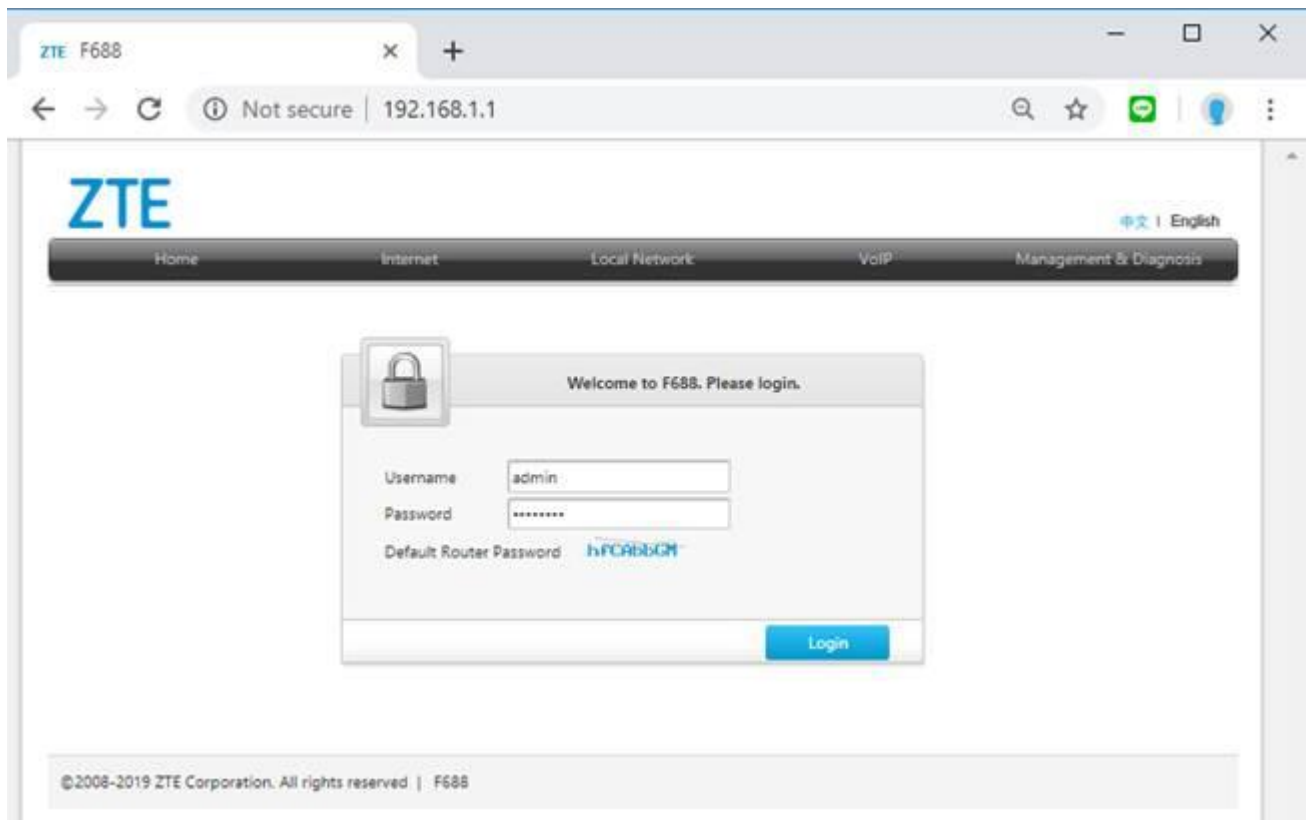

2. ตั้งค่าดังนี้ (กรณีใช้ True DDNS ไม่ต้องตั้งค่านี้)

- ไปที่แถบ Internet
- เมื่อด้านซ้ายมือ เลือก DDNS
- WAN Connection : เลือก Auto
- Provider : เลือกตาม Host ที่สมัครไว้
- DDNS : เลือก On เพื่อเปิดใช้งาน
- Provider URL : เป็นค่าเริ่มต้นตาม Provider , ไม่ต้องเปลี่ยน
- Username / Password : ใส่ Username / Password ที่ใช้ login หน้าเว็บผู้ให้บริการ DDNS
- Host Name : ใส่ชื่อ Host ที่ลงทะเบียนไว้กับผู้ให้บริการ DDNS
- ตั้งค่าเรียบร้อยแล้ว กดปุ่ม Apply

ZTE Current Time: 1970-01-01T00:51 admin Logout 中文 | English

Home Internet **1** Local Network VoIP Management & Diagnosis

Status
Security
DDNS 2
SNTP
Port Binding
Port Locating
PON Information

Page Information
This page provides the function of DDNS parameter(s) configuration.

DDNS

3 WAN Connection: Auto

4 Provider: DynDNS

5 DDNS: On Off

6 Provider URL: http://www.dyndns.com

7 Username: testddns

7 Password:

8 Host Name: testddns.dyndns.org

9 Apply Cancel

©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T9