


## การตั้งค่า Dynamic DNS สำหรับ GCOM GN2000-04GS-2VT

1. พิมพ์ **192.168.1.1** กด Enter ใส่ Username = **admin**, Password = **password** จากนั้นกด **Login**



2. เมนูด้านบน เลือก **Advanced Setup** จากนั้นเมนูด้านข้าง เลือก **Dynamic DNS**

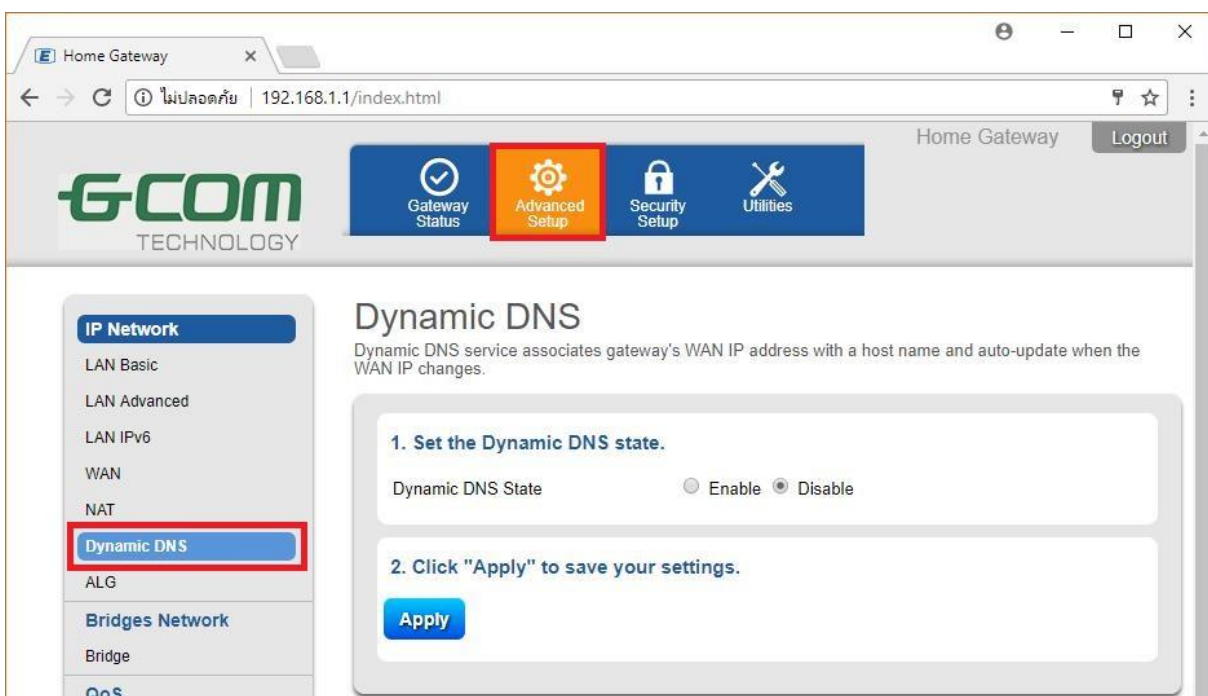

### 3. ตรวจสอบการตั้งค่าดังนี้

- **Dynamic DNS State:** เลือก **Enable**
- **Select Dynamic Server:** เลือกผู้ให้บริการ Dynamic DNS ตามที่ลูกค้าสมัครไว้
- **Username:** ใส่ Username ที่ลูกค้าสมัครบริการ Dynamic DNS (Host) ไว้
- **Password:** ใส่ Password ที่ลูกค้าสมัครบริการ Dynamic DNS (Host) ไว้
- **Host Name:** ให้ลูกค้าพิมพ์ชื่อ Host ที่ลูกค้าตั้งไว้
- กด **Apply** หลังจากนั้นจะมีข้อมูลที่ลูกค้าตั้งค่าไว้แสดงที่ด้านล่าง

**Dynamic DNS**  
Dynamic DNS service associates gateway's WAN IP address with a host name and auto-update when the WAN IP changes.

- 1. Set the Dynamic DNS state.**  
Dynamic DNS State  Enable  Disable
- 2. Select dynamic server.**  
Select Dynamic Server
- 3. Enter username and password.**  
Username   
Password
- 4. Enter the host name.**  
Host Name
- 5. Click "Apply" to save your settings.**

Dynamic DNS Reporting			
Reported Address	Date	Time	Report Status
0.0.0.0	January 01, 1970	0:00 AM	Fail