


วิธีตรวจสอบรายการอุปกรณ์ที่เชื่อมต่อกับ ZTE F688

1. พิมพ์ 192.168.1.1 ที่ Browser แล้วกด Enter

- Username = admin
- Password = กรอกตามรูปในช่อง Default Router Password (ZTE แต่ละตัวไม่เหมือนกัน)
- จากนั้นกดปุ่ม Login

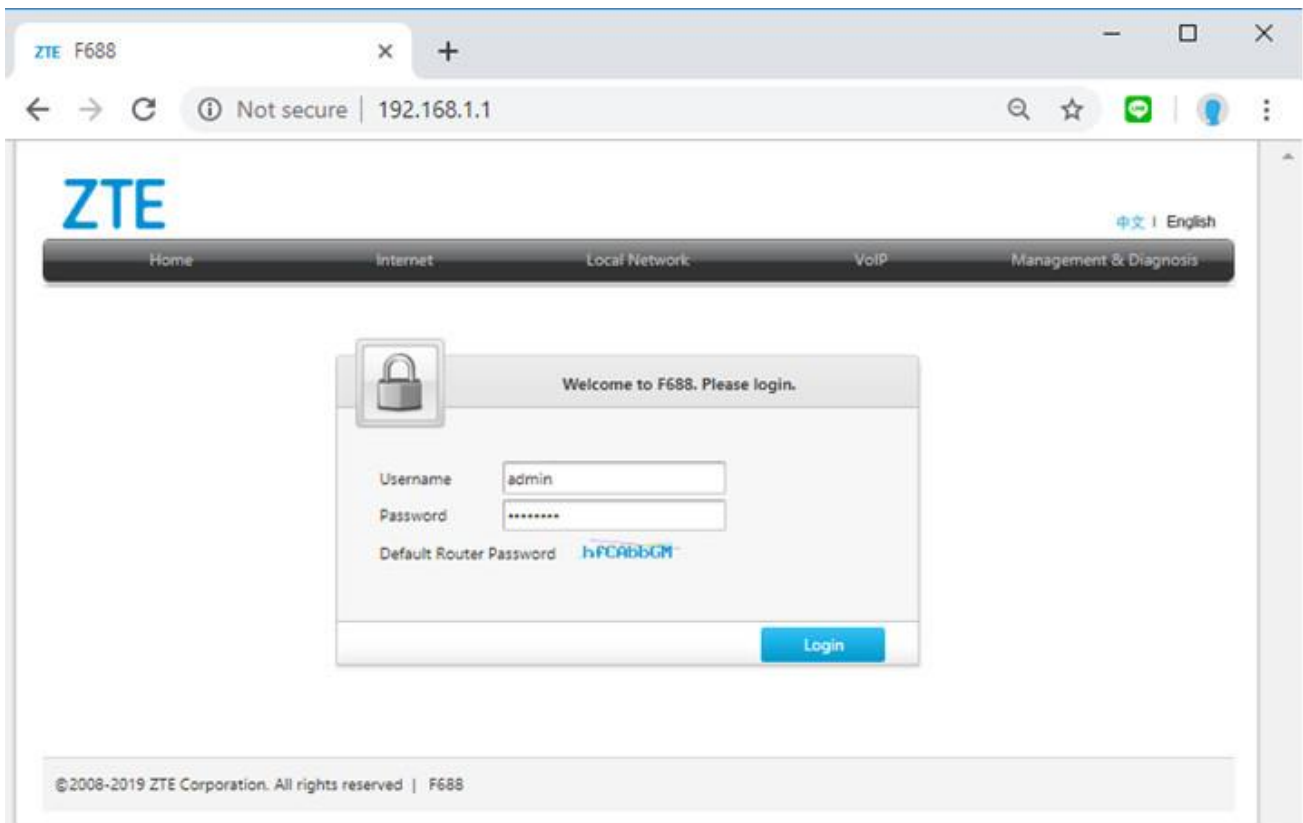

วิธีการตรวจสอบ 2 วิธี ดังนี้

2. ตรวจสอบที่หน้า Status

2.1. ที่หน้า Status ด้านล่าง เลือก WLAN จะแสดงอุปกรณ์ที่เชื่อมต่อสัญญาณ Wi-Fi

The screenshot shows the ZTE router's status page. At the top, there's a navigation bar with 'Home', 'Internet', 'Local Network', 'VoIP', and 'Management & Diagnosis'. Below this is a 'WAN Setting' section with a diagram showing 'WAN Setting' connected to a 'Firewall' and then to a router. The main content area is titled 'Device List' and contains three sub-sections: 'WLAN Devices', 'LAN Devices', and 'VoIP Devices'. The 'WLAN Devices' section is expanded, showing a table of connected devices. An orange arrow labeled '1' points to the 'WLAN Devices' menu item. Another orange arrow labeled '2' points to the first device in the table, 'DESKTOP-HD065R'.

Name	MAC Address	IPv4 Address	IPv6 Address
DESKTOP-HD065R	34:f6:4b:74:ae:00	192.168.1.34	fe80:b42b:f9a9:76fe...


2.2. ที่หน้า Status ด้านล่าง เลือก LAN จะแสดงอุปกรณ์ที่เชื่อมต่อสาย LAN

The screenshot shows the ZTE router's status page, similar to the previous one. The 'LAN Devices' section is expanded, showing a table of connected devices. An orange arrow labeled '1' points to the 'LAN Devices' menu item. Another orange arrow labeled '2' points to the first device in the table, 'CMTY-KOMSAN7'.


Name	MAC Address	IPv4 Address	IPv6 Address
CMTY-KOMSAN7	9c:5a:44:56:e3:52	192.168.1.33	fe80:b024:ea1d:702c...

3. ตรวจสอบที่หัวข้อ Local Network

3.1. ไปที่ Local Network

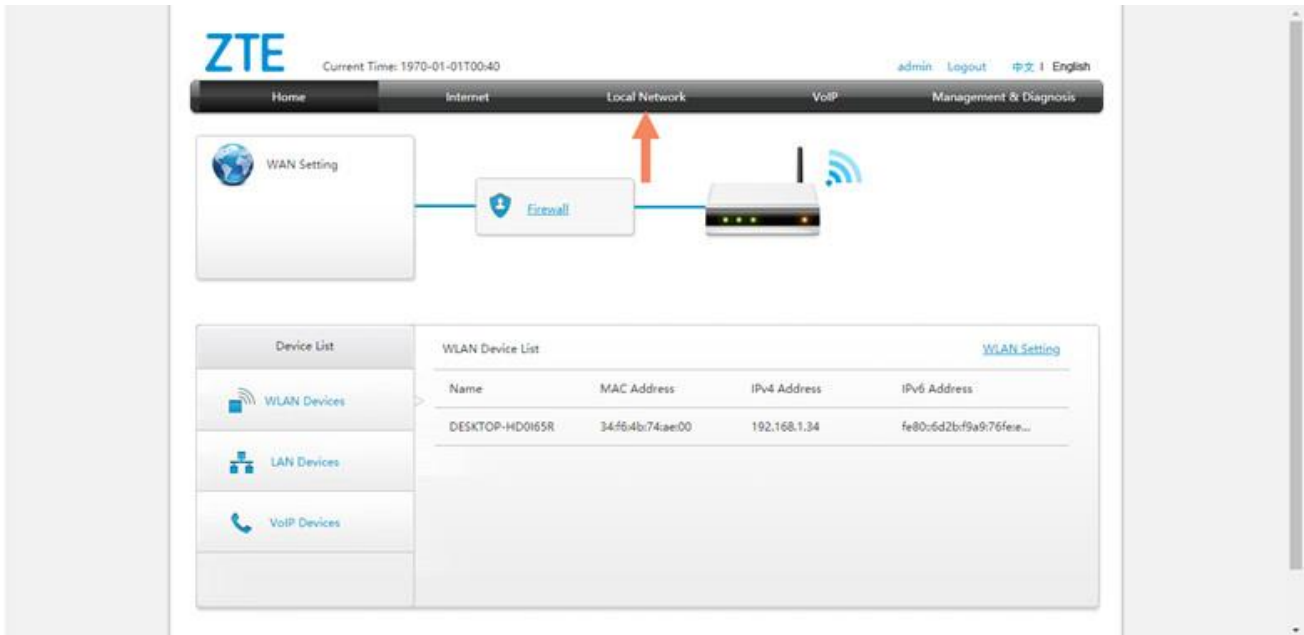

3.2. ที่ Status ของ Local Network เลื่อนหน้าจอลงมาด้านล่าง

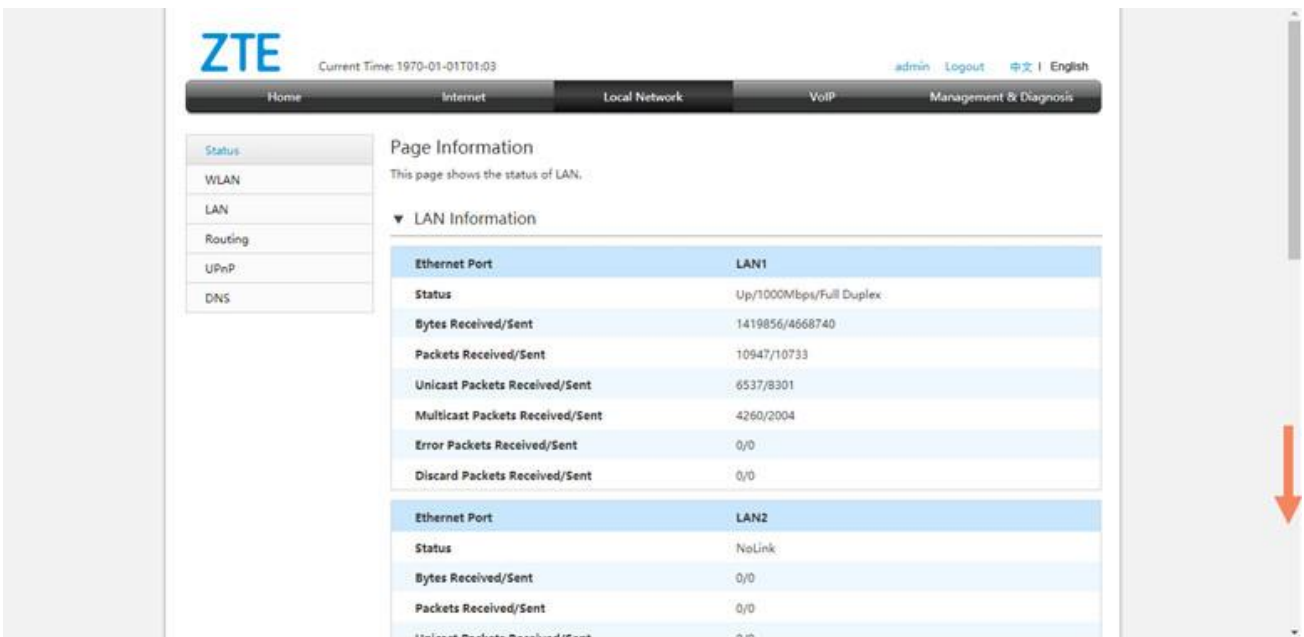

3.3. ที่หัวข้อ WLAN Client Status จะแสดงรายการอุปกรณ์ที่เชื่อมต่อผ่านสัญญาณ Wi-Fi

Multicast Packets Received/Sent 0/0
 Error Packets Received/Sent 0/0
 Discard Packets Received/Sent 0/0

Refresh

▶ WLAN Status

▶ **WLAN Client Status**

Client-1

SSID	SSID1	Name	iPhone
IPv4 Address	192.168.1.35	MAC Address	0c:77:1a:16:06:4c
IPv6 Address	fe80:1c85:438d:57f4:7bba		

Refresh

▶ LAN Client Status

©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T11

3.4. ที่หัวข้อ LAN Client Status จะแสดงรายการอุปกรณ์ที่เชื่อมต่อผ่านสาย LAN

Multicast Packets Received/Sent 0/0
 Error Packets Received/Sent 0/0
 Discard Packets Received/Sent 0/0

Refresh

▶ WLAN Status

▶ WLAN Client Status

▶ **LAN Client Status**

Client-1

Port	LAN1	Name	CMTY-KOMSAN7
IPv4 Address	192.168.1.33	MAC Address	9c:5a:44:56:e3:52
IPv6 Address	fe80:b024:ea1d:702c:b04		

Refresh

©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T11