


การตั้งค่าโหมด Access Point ของ AP Xplor RE1200R4GC-2T2R-V3

- พิมพ์ 192.168.2.1 แล้วกด Enter จากนั้นใส่ User : **admin** / Password : กรอกข้อความตามรูปด้านล่าง (ถ้ามองไม่ชัดให้คลิกที่รูปภาพ รูปภาพจะเปลี่ยนไปเรื่อยๆ แต่จะเป็นรหัสสลับเสมอ)




Login


This page is used to login.

Username:

Password:




2. หน้า Status

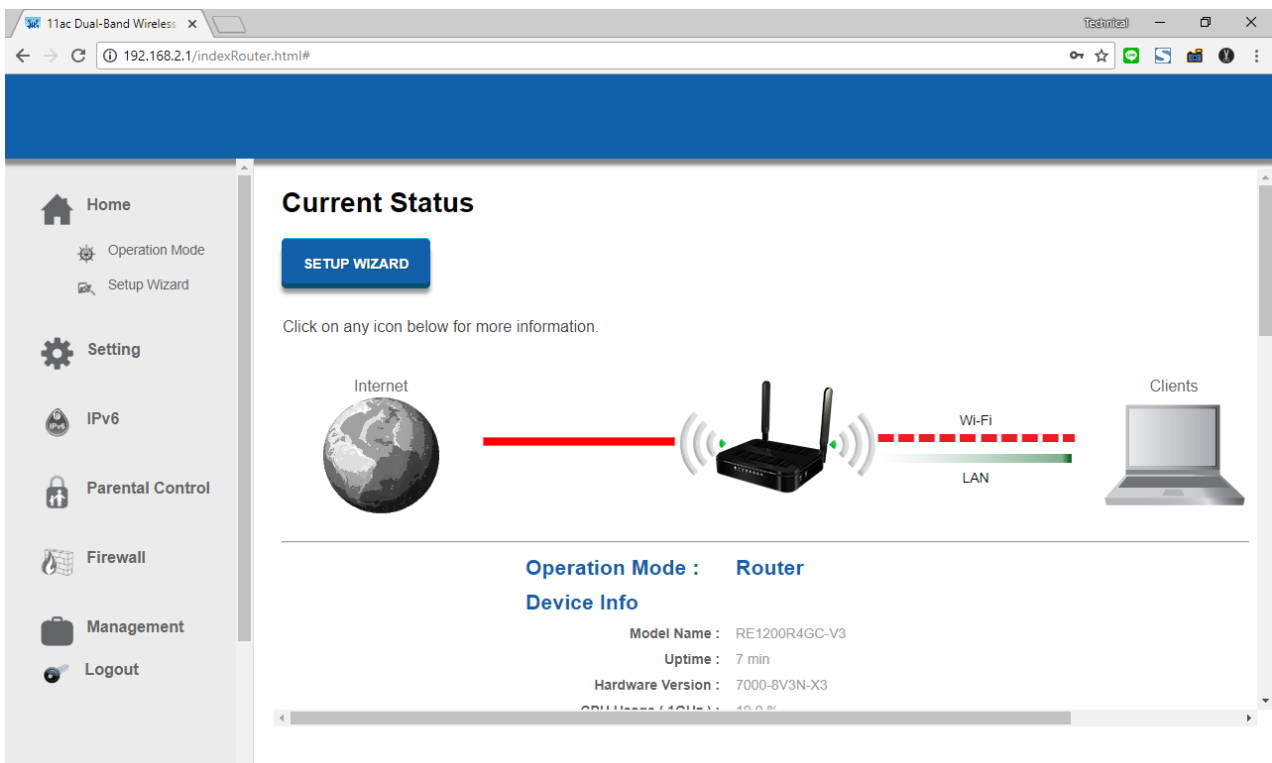


3. การตั้งค่ามี 2 วิธี ดังนี้

3.1. ตั้งค่าที่ Wizard


3.1.1. กดปุ่ม Setup Wizard ที่หน้า Status

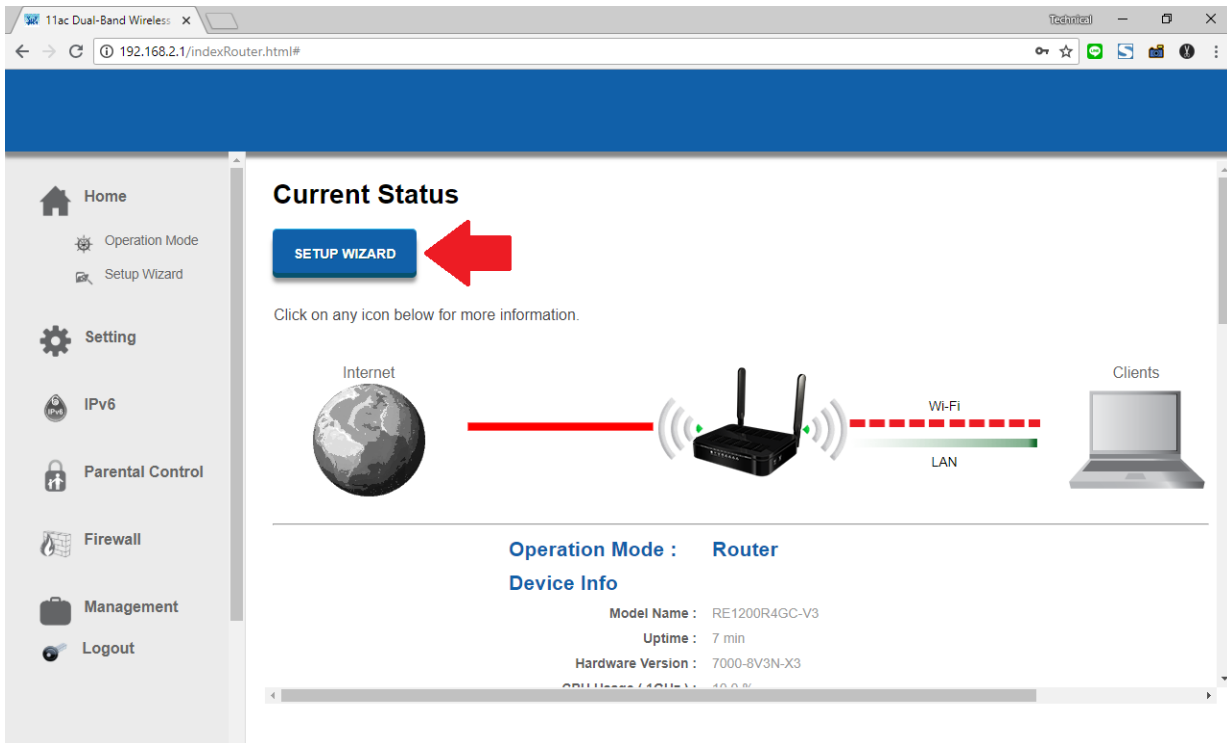


3.1.2. WAN Access Type เลือก DHCP Client กด Next

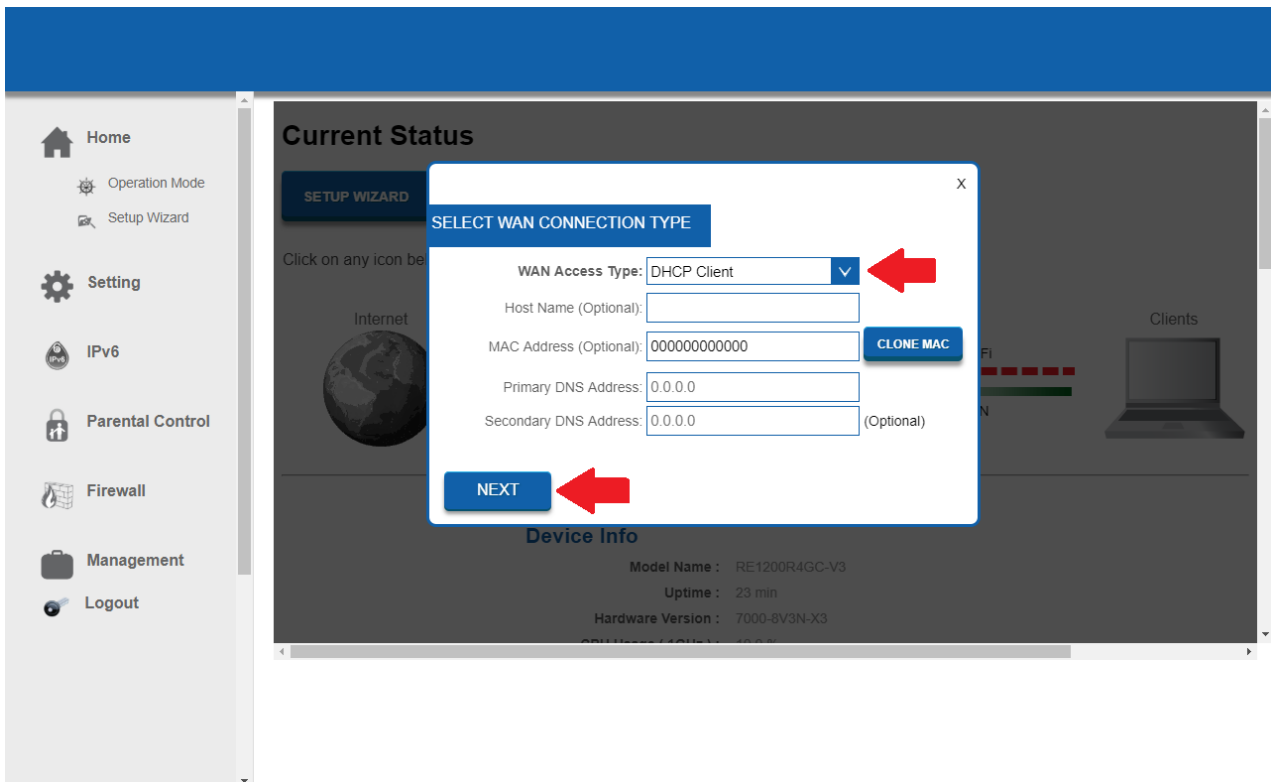

3.1.3. ตั้งค่า Wireless ตามต้องการแล้วกด APPLY & REBOOT

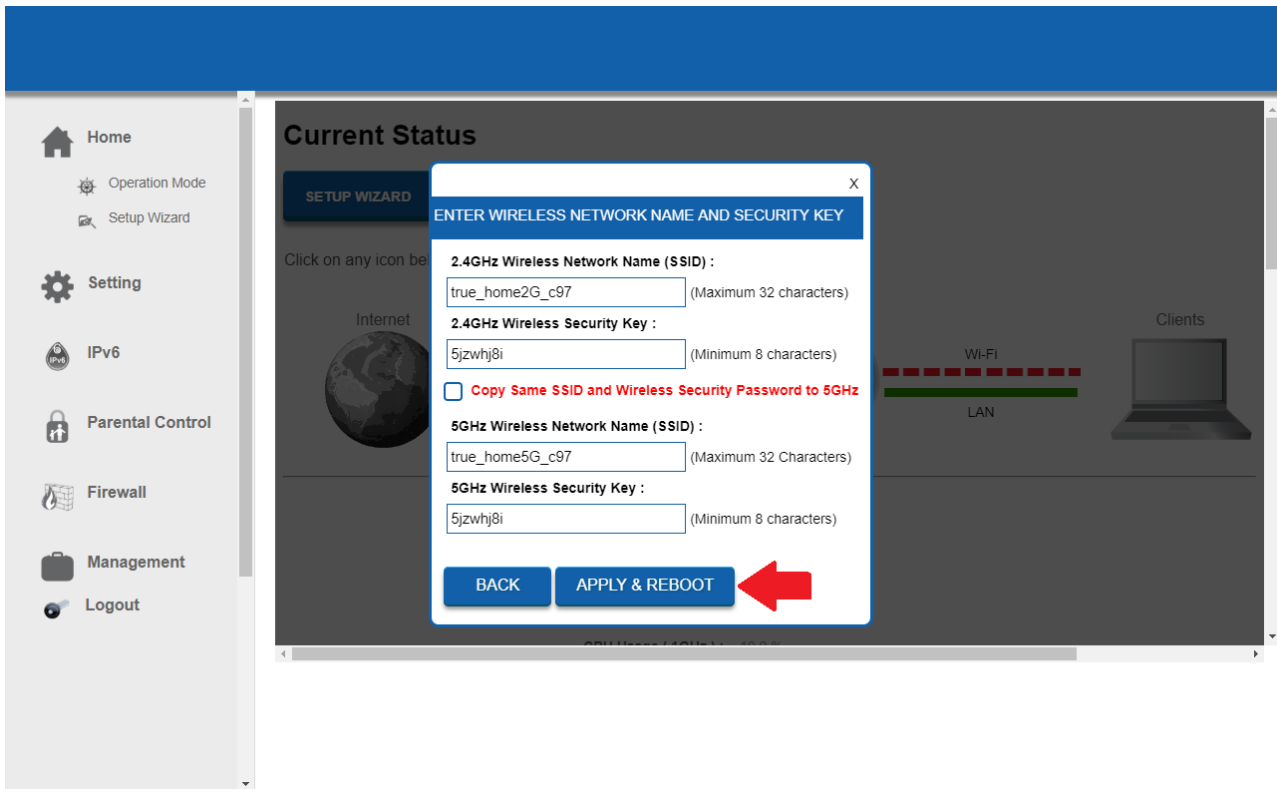


3.1.4. รอให้ AP Reboot จนครบ 100%

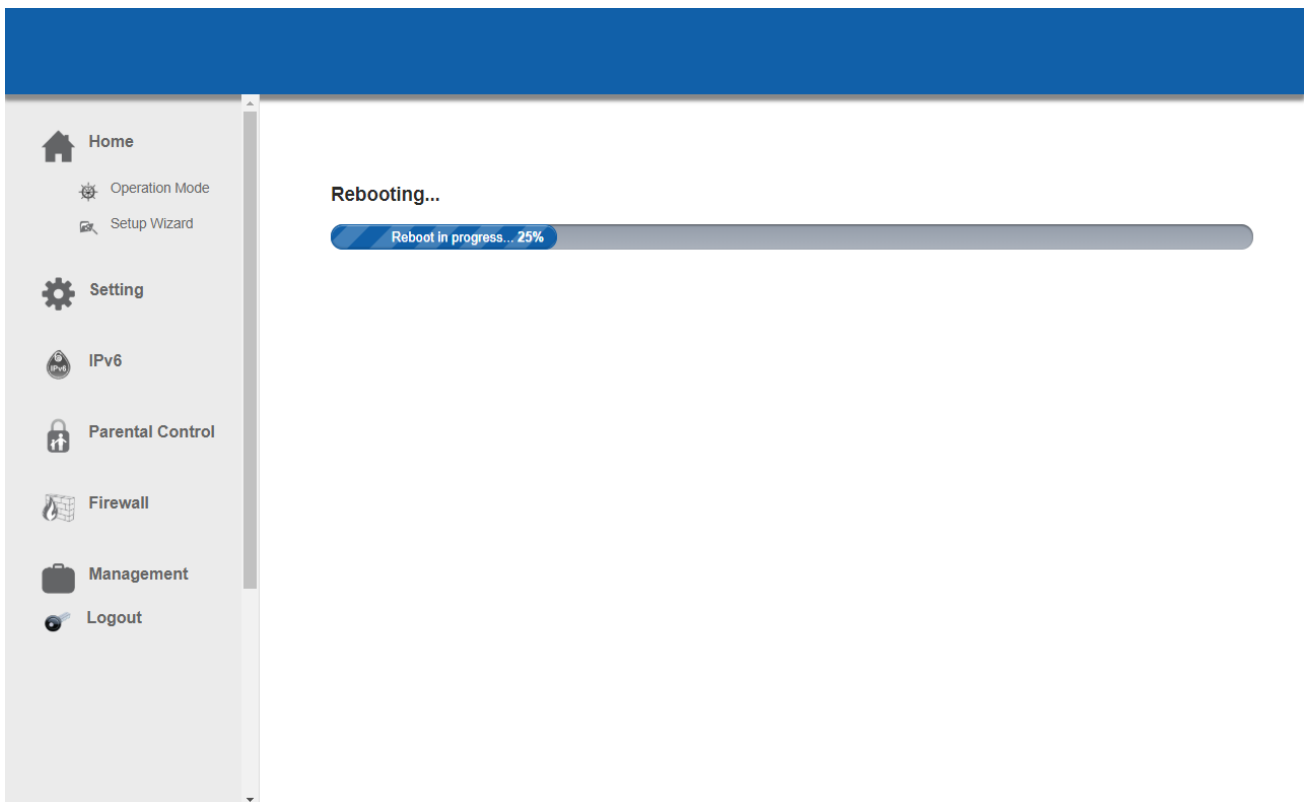


3.2. ตั้งค่าที่เมนู Setting

3.2.1. ที่หน้า Status เมนูด้านซ้าย ไปที่ Setting > Network

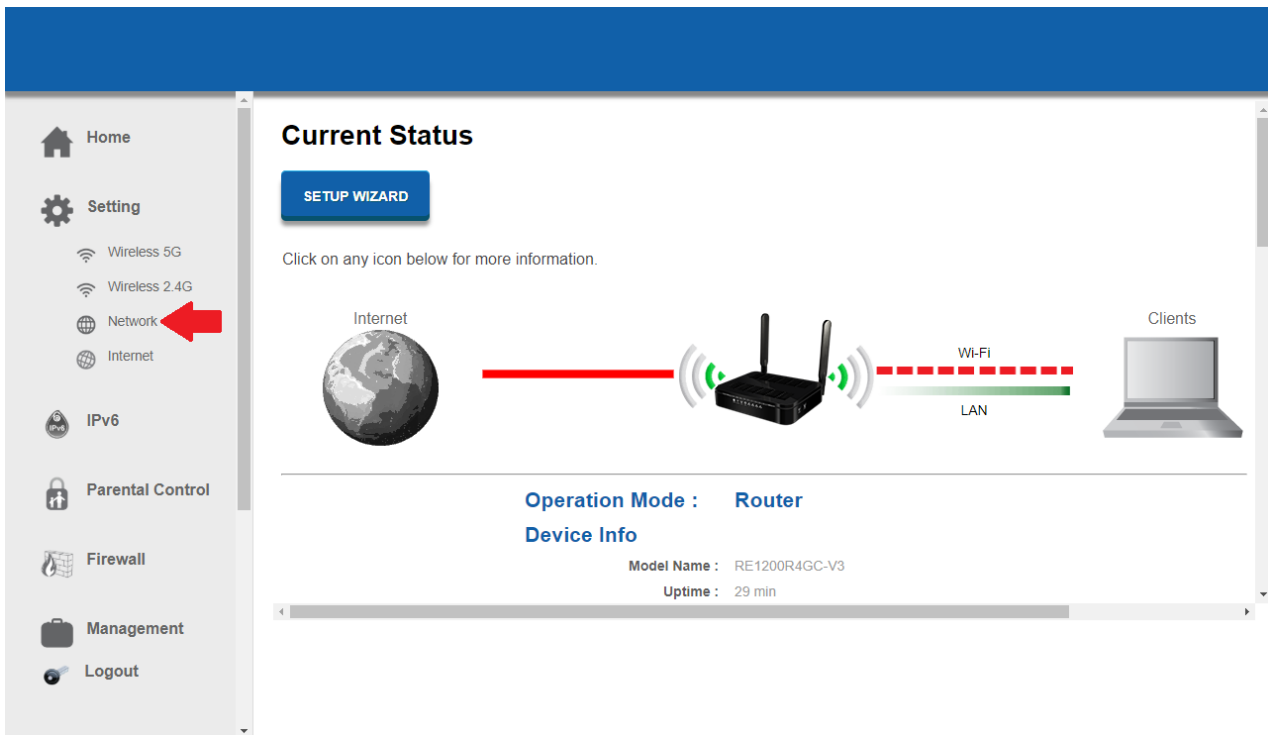

3.2.2. Internet Connection Type เลือก DHCP Client

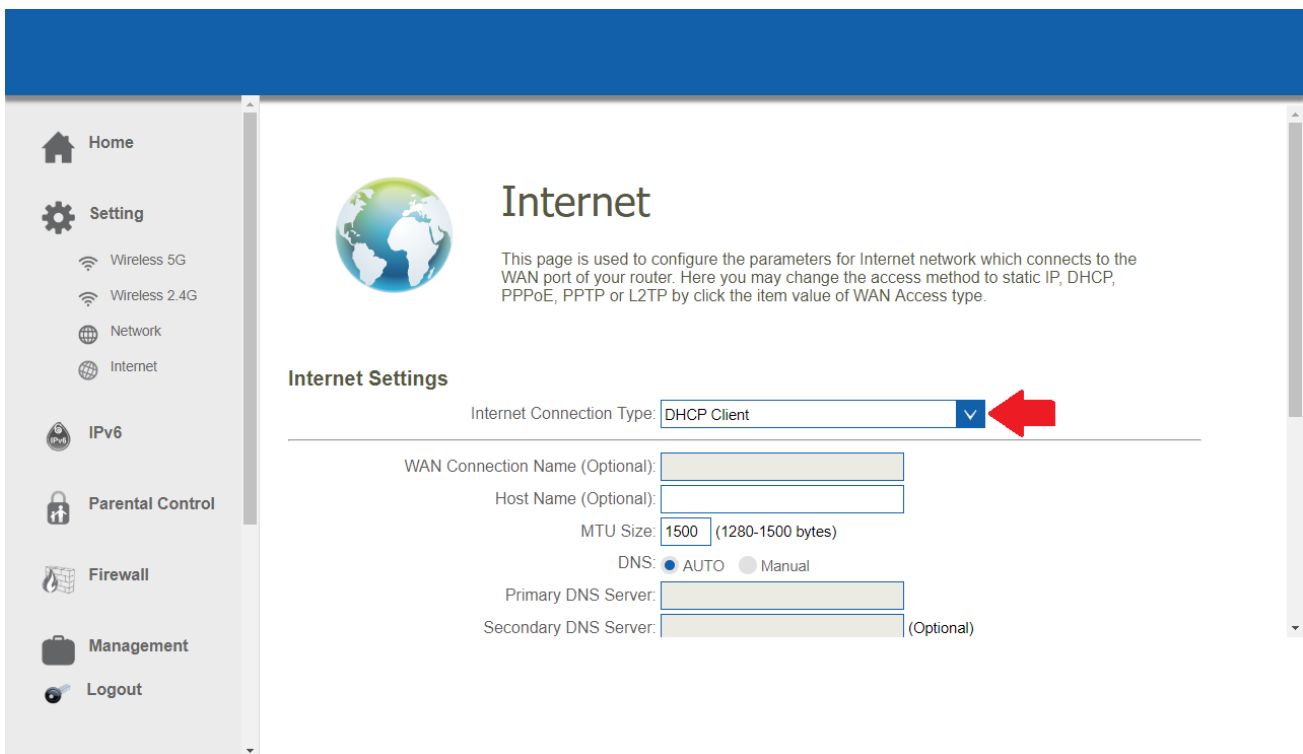

3.2.3. เลื่อนลงมาด้านล่าง กด SAVE AND REBOOT NOW

Home

Setting

- Wireless 5G
- Wireless 2.4G
- Network
- Internet

IPv6

Parental Control

Firewall

Management

Logout

WAN Connection Name (Optional):

Host Name (Optional):

MTU Size: (1280-1500 bytes)

DNS: AUTO Manual

Primary DNS Server:

Secondary DNS Server: (Optional)

MAC Address (Optional):

uPnP

IGMP Proxy

IGMP Proxy On Physical Interface

IPSec pass through

PPTP pass through

L2TP pass through

3.2.4. รอให้ AP Reboot จนเสร็จ 100%

Home

Setting

- Wireless 5G
- Wireless 2.4G
- Network
- Internet

IPv6

Parental Control

Firewall

Management

Logout

Rebooting...

Reboot in progress... 97%