



การตั้งค่า DMZ สำหรับ GCOM GN2000-04GS-2VT

1. พิมพ์ **192.168.1.1** กด Enter ใส่ Username = **admin**, Password = **password** จากนั้นกด **Login**

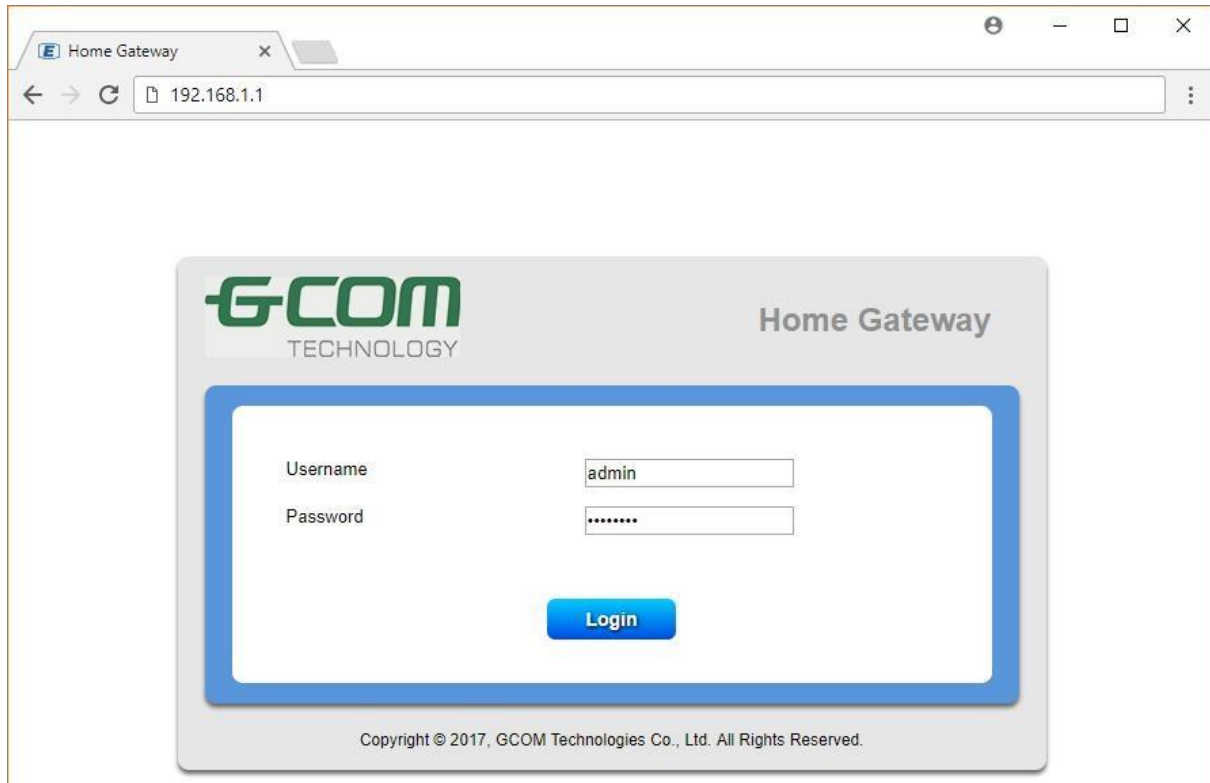

2. เมื่อด้านบน เลือก **Security Setup** จากนั้นเมนูด้านข้าง เลือก **Security > DMZ Hosting**

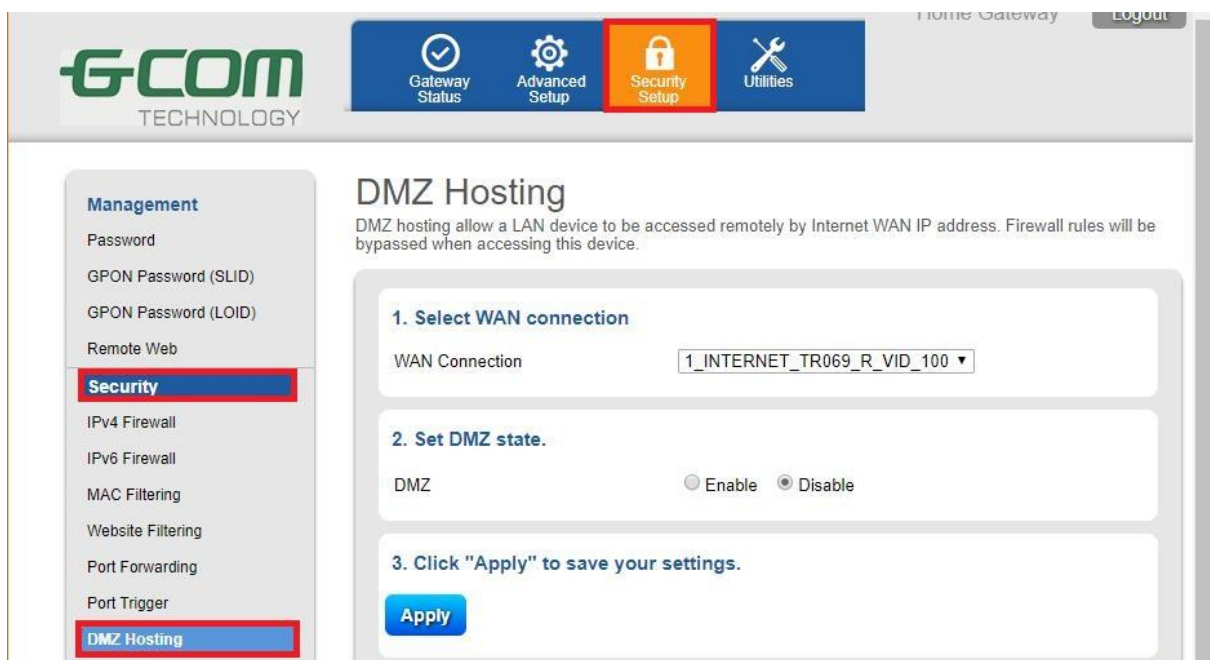

3. ตรวจสอบการตั้งค่าดังนี้

- **WAN Connection:** เลือก 1_INTERNET_TR069_INTERNET_R_VID_100
- **DMZ:** เลือก Enable
- **Device:** เลือกอุปกรณ์ที่ลูกต้องการ หรือ ใส่ IP Address เองที่ช่อง IP Address
- กด **Apply** จากนั้นจะมีข้อมูลที่ลูกกำลังไว้แสดงที่ตารางด้านล่าง

Home Gateway | 192.168.1.1/index.html

Home Gateway | Logout

GCOM TECHNOLOGY

Gateway Status | Advanced Setup | **Security Setup** | Utilities

Management

- Password
- GPON Password (SLID)
- GPON Password (LOID)
- Remote Web

Security

- IPv4 Firewall
- IPv6 Firewall
- MAC Filtering
- Website Filtering
- Port Forwarding
- Port Trigger
- DMZ Hosting**
- UPnP

DMZ Hosting

DMZ hosting allow a LAN device to be accessed remotely by Internet WAN IP address. Firewall rules will be bypassed when accessing this device.

- Select WAN connection**
WAN Connection: 1_INTERNET_TR069_R_VID_100
- Set DMZ state.**
DMZ: Enable Disable
- Select device, or manually enter an IP address.**
Device: Manually Enter IP Address
IP Address: 192.168.1.33

3. Click "Apply" to save your settings.

Apply

DMZ Hosted Device			
Device Name	IP Address	WAN Connection	Edit
Unknown	192.168.1.33	1_INTERNET_TR069_R_VID_100	Remove

Copyright © 2017, GCOM Technologies Co., Ltd. All Rights Reserved.