


## การตั้งค่า Wi-Fi สำหรับ ZTE F668

1. เปิด Browser พิมพ์ URL ไปที่ <http://192.168.1.1> ที่ช่อง Address กด Enter หลังจากนั้นจะขึ้นหน้า  
 เพจอของ ZTE ให้พิมพ์ Username = admin และ Password = password และ กด Login



2. หลังจาก Login เข้ามาแล้วหน้าแรกจะแสดงดังรูป คลิกเมนู Network

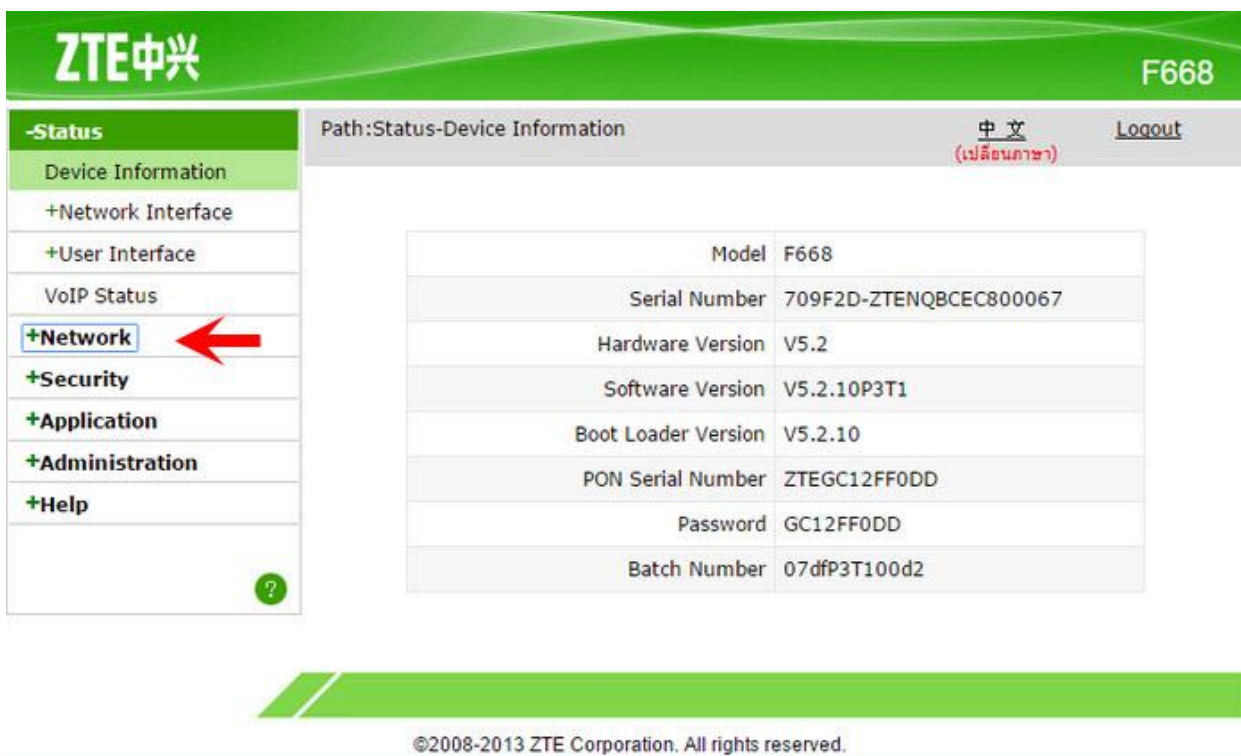

3. ไปที่เมนู **WLAN** และเมนู **Basic** จะแสดงดังรูป มีค่าที่สำคัญดังนี้

- **Wireless RF Mode** = สำหรับ ปิด/เปิด การใช้งาน **Wi-Fi**
- **Mode** = เลือกรูปแบบการใช้งาน **Wi-Fi** แนะนำให้เลือกอันสุดท้าย **Mixed (b,g,n)**
- **Country/Region** = ควรเลือกเป็น **United States of America**
- **Channel** = Default เป็น **Auto**

**ZTE 中兴 F668**

Path: Network-WLAN-Basic    中文    Logout

Tip: Wireless RF mode from disabled to scheduled take a minute or so, please refresh.

**Wireless RF Mode** Enabled

**Enable Isolation**

**Mode** Mixed(802.11b+802.11g+802.11n)

**Country/Region** United States of America

**Band Width** 20MHz

**Channel** Auto

**SGI Enable**

**Beacon Interval** 100 ms

**Transmitting Power** 100%

**QoS Type** WMM

**RTS Threshold** 2347

**DTIM Interval** 1

**WiFi Restrictions** WMM

**Country/Region List:** China, Australia, Brazil, Canada, Egypt, France, Germany, Greece, China Hongkong, Italy, Korea, Spain, United Kingdom, United States of America, Russia, Indonesia, Singapore, Thailand

Submit    Cancel

4. คลิกที่เมนู **WLAN** และคลิกที่ **SSID Setting** ด้านซ้าย มีค่าที่สำคัญดังนี้

- **Choose SSID** = สามารถเลือกได้ 4 ค่า คือ **SSID1 – SSID4**
- **Hide SSID** = หากไม่ต้องการให้แสดง **SSID** ให้คนอื่นเห็น ให้ติ๊กเครื่องหมายถูก
- **Enable SSID** = คลิกถูกเพื่อเปิดใช้งาน
- **SSID Name** = ตั้งชื่อสัญญาณ **Wi-Fi**

The screenshot displays the ZTE F668 router's configuration interface. The breadcrumb path is 'Network-WLAN-SSID Settings'. The left sidebar shows the navigation menu with 'WLAN' and 'SSID Settings' selected. The main configuration area includes the following settings:

- Choose SSID:** A dropdown menu currently showing 'SSID1'. A red arrow points to the dropdown, and another red arrow points to the 'SSID1' option in the expanded list.
- Hide SSID:** An unchecked checkbox.
- Enable SSID:** A checked checkbox.
- Enable SSID Isolation:** An unchecked checkbox.
- Maximum Clients:** An input field containing '32' with a range of '(1 ~ 32)'.
- SSID Name:** An input field containing 'F668X' with a range of '(1 ~ 32 characters)'.
- Priority:** A dropdown menu currently showing '0'. A red arrow points to the dropdown, and another red arrow points to the '0' option in the expanded list.

At the bottom right of the configuration area, there are 'Submit' and 'Cancel' buttons.

5. คลิกที่เมนู **WLAN** และคลิกที่ **Security** ด้านซ้าย มีค่าที่สำคัญดังนี้

- **Choose SSID** = เลือก SSID ที่ตั้งค่าไว้
- **Authentication Type** = เลือกระบบความปลอดภัยที่ต้องการ
- **WPA Passphrase** = ตั้งค่ารหัสตามต้องการ

The screenshot shows the ZTE F668 router's configuration interface. The path is Network-WLAN-Security. The left sidebar has a menu with 'WLAN' and 'Security' highlighted. The main configuration area includes:

- Choose SSID:** A dropdown menu with 'SSID1' selected. A list of SSIDs (SSID1, SSID2, SSID3, SSID4) is shown to the right.
- Authentication Type:** A dropdown menu with 'WPA/WPA2-PSK' selected.
- WPA Passphrase:** A text input field containing '1234567890' with a note '(8 ~ 63 characters)'.
- WPA Encryption Algorithm:** A dropdown menu with 'TKIP+AES' selected. A list of encryption algorithms (TKIP, AES, TKIP+AES, Open System, Shared Key, WPA-PSK, WPA2-PSK, WPA-EAP, WPA2-EAP, WPA/WPA2-EAP) is shown to the right.

At the bottom right, there are 'Submit' and 'Cancel' buttons.