

Pictures and Details of HUAWEI HG8122

HUAWEI HG8122




Front



Back

- 1) CATV : Cable port RG6 for True Visions
- 2) LAN2 : LAN port RJ45 (10/100 Mbps)
- 3) LAN1 : LAN port RJ45 (10/100/1000 Mbps)
- 4) TEL : telephone port RJ11 (for Fixed Line Plus service)
- 5) Power : power in port 12V 2A
- 6) On/Off : Power On/ Off button

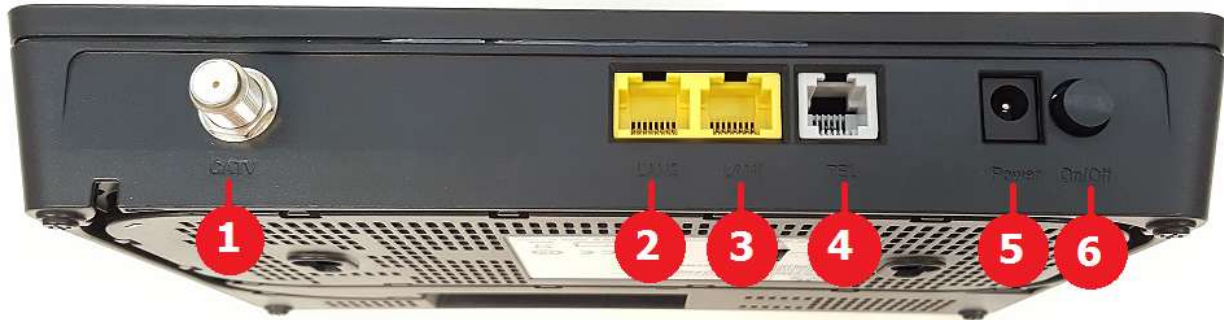

Top



Bottom

- 1) PON : Fiber Optic cable port



Left



Right

- 1) Reset : to reset factory setting (press and hold it for 10 seconds)



LED indicators - HUAWEI HG8122

สถานะพร้อมใช้งาน



สถานะไม่พร้อมใช้งาน



No.	ไฟ	สถานะ	คำอธิบาย
1	POWER	ไม่ติด	ไม่มีไฟเข้า
		สีเขียวนิ่ง	มีไฟเข้าปกติ
2	PON	ไม่ติด	การลงทะเบียนกับระบบไม่สำเร็จ หรือไม่ได้เปิดอุปกรณ์
		สีเขียวนิ่ง	การลงทะเบียนกับระบบสำเร็จ
		สีเขียวกระพริบ	กำลังทำการลงทะเบียนกับระบบ
3	LOS	ไม่ติด	ระบบมีสัญญาณปกติ หรือไม่ได้เปิดโมเด็ม
		สีแดงนิ่ง	ไม่มีสัญญาณเข้า , ไฟ PON ไม่ติด
		สีแดงกระพริบ	สัญญาณอ่อน
4	CATV	ไม่ติด	ไม่ได้เปิดอุปกรณ์ หรือไม่ได้เปิดสัญญาณ CATV
		สีเขียวนิ่ง	มีสัญญาณ CATV ค่าสัญญาณอยู่ที่ -6dB และ 0dB
5	LAN1,2	ไม่ติด	ไม่ได้เปิดอุปกรณ์ หรือไม่มีการเชื่อมต่อ LAN
		สีเขียวนิ่ง	ไม่มีการเชื่อมต่อ LAN แล้วแต่ไม่มีการรับส่งข้อมูล
		สีเขียวกระพริบ	มีการใช้งานและรับส่งข้อมูลอยู่
6	Phone	ไม่ติด	ไม่ได้เปิดอุปกรณ์ หรือ อุปกรณ์เชื่อมต่อกับ soft switch ไม่ได้
		สีเขียวนิ่ง	มีการเชื่อมต่อกับ soft switch ได้แล้ว แต่ไม่มีสัญญาณ VoIP
		สีเขียวกระพริบ	มีสัญญาณ VoIP

Contents in a box

- 1) Router Huawei HG8122
- 2) Power Adapter
- 3) LAN cable (RJ45)
- 4) User Manual



Device connection

