Set Mac Filter on ZTE F688

1. Type 192.168.1.1 at Browser and press Enter
   - Username = admin
   - Password = enter letters shown in Default Router Password (each ZTE model will vary)
   - Press Login

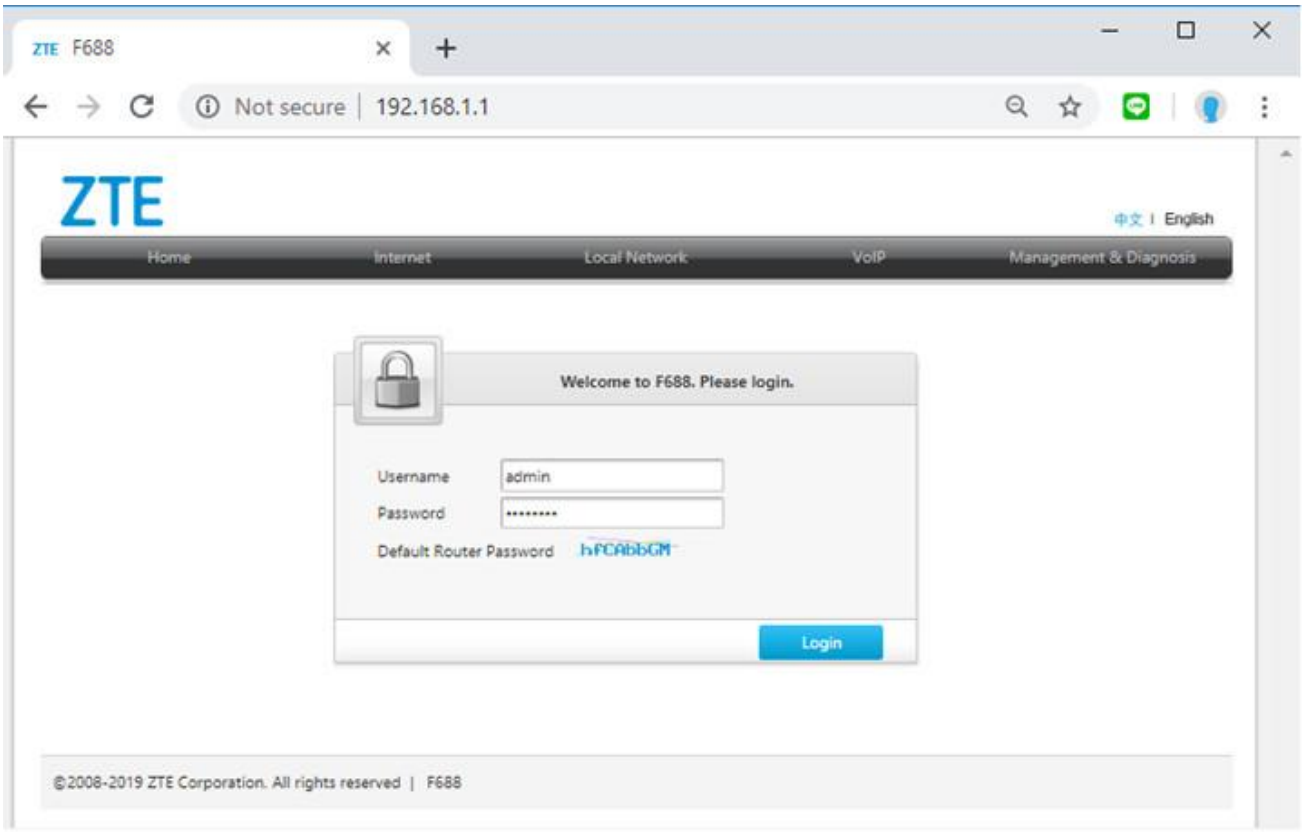

TRUE CORPORATION PUBLIC COMPANY LIMITED
18 TRUE TOWER, RATCHADAPHISEK ROAD,
HUAI KHWANG, BANGKOK10310 THAILAND
WWW.TRUECORP.CO.TH

2. Status > Local Network

3. Go to WLAN

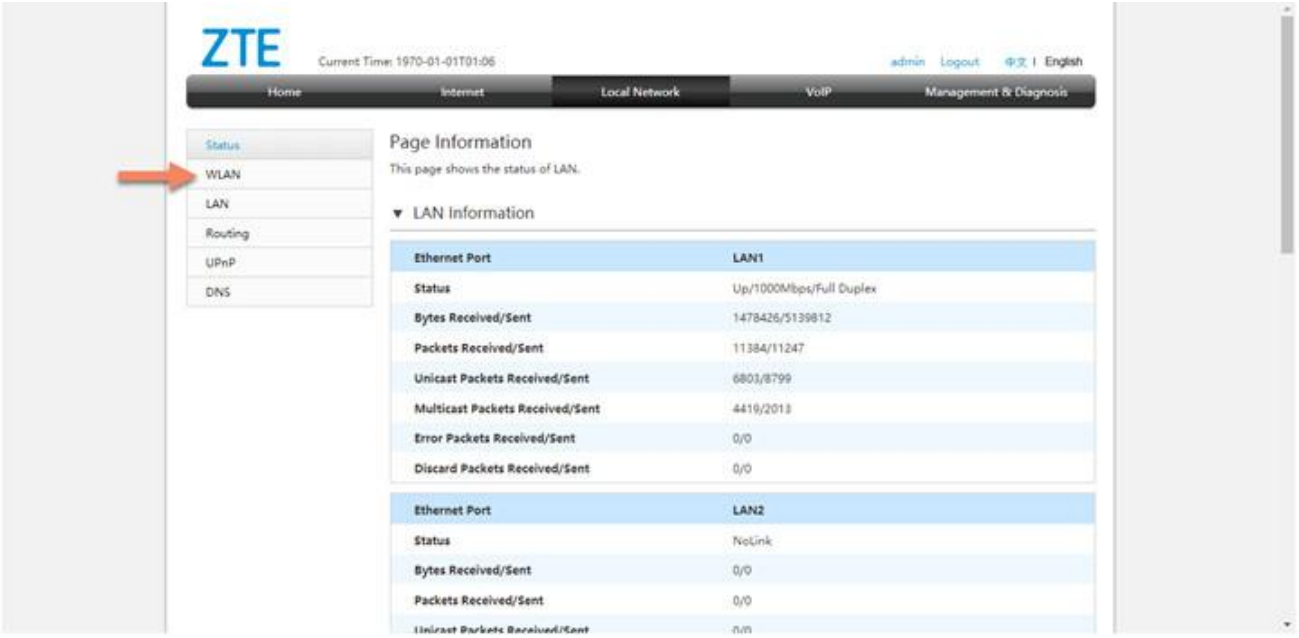

4. And then WLAN Advanced

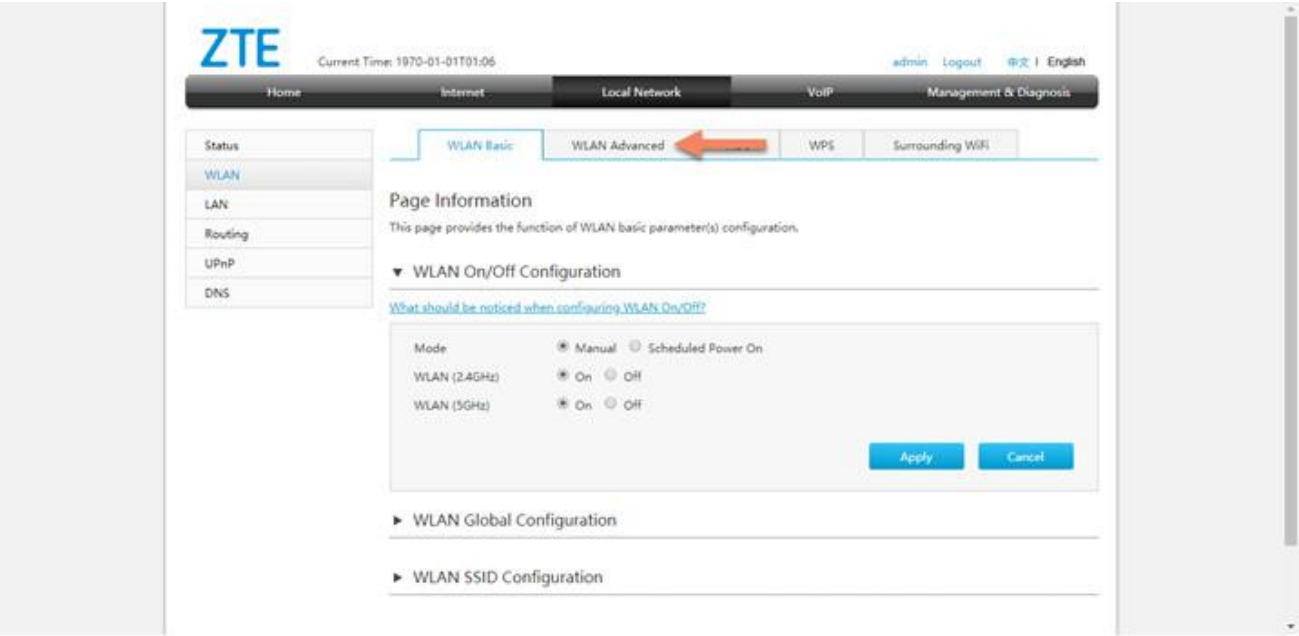

5. Set up as follow:

- SSID : set name
- SSID1 : 2.4 GHz
- SSID5 : 5 GHz
- Mode : choose preferred mode
- No Filter : not set Filter
- Black List : not allow to use
- White List : allow to use
- Press Apply

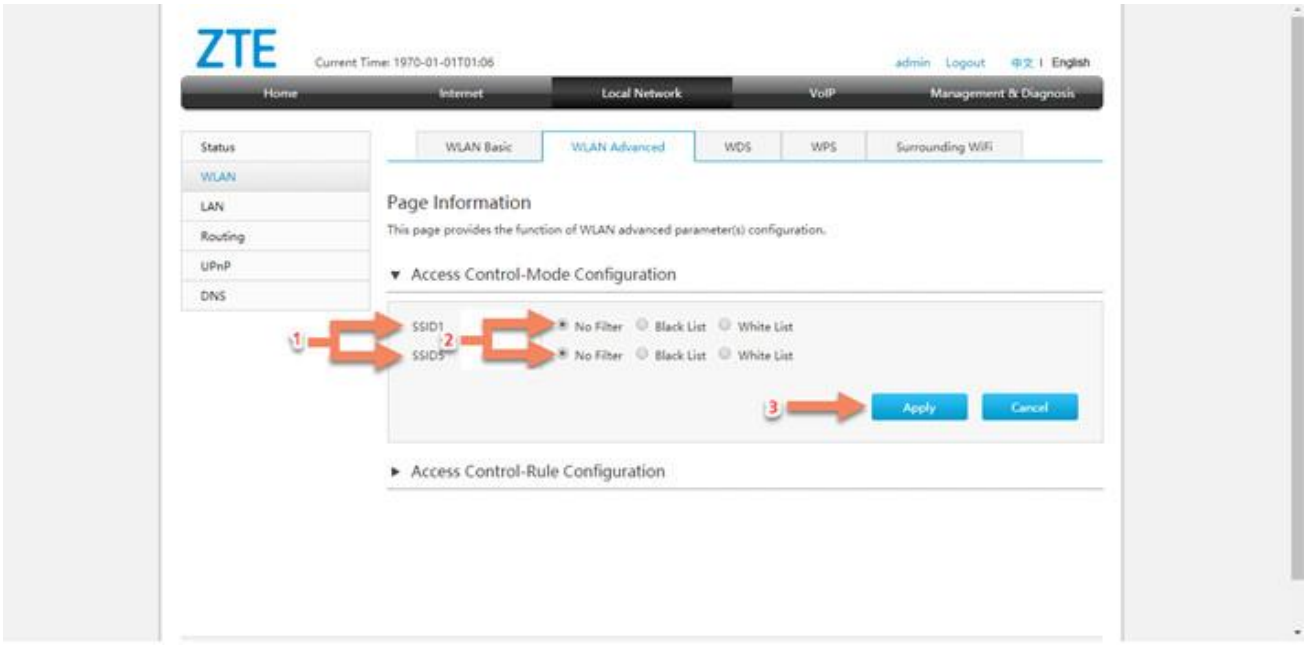

6. Select Access Control-Rule Configuration

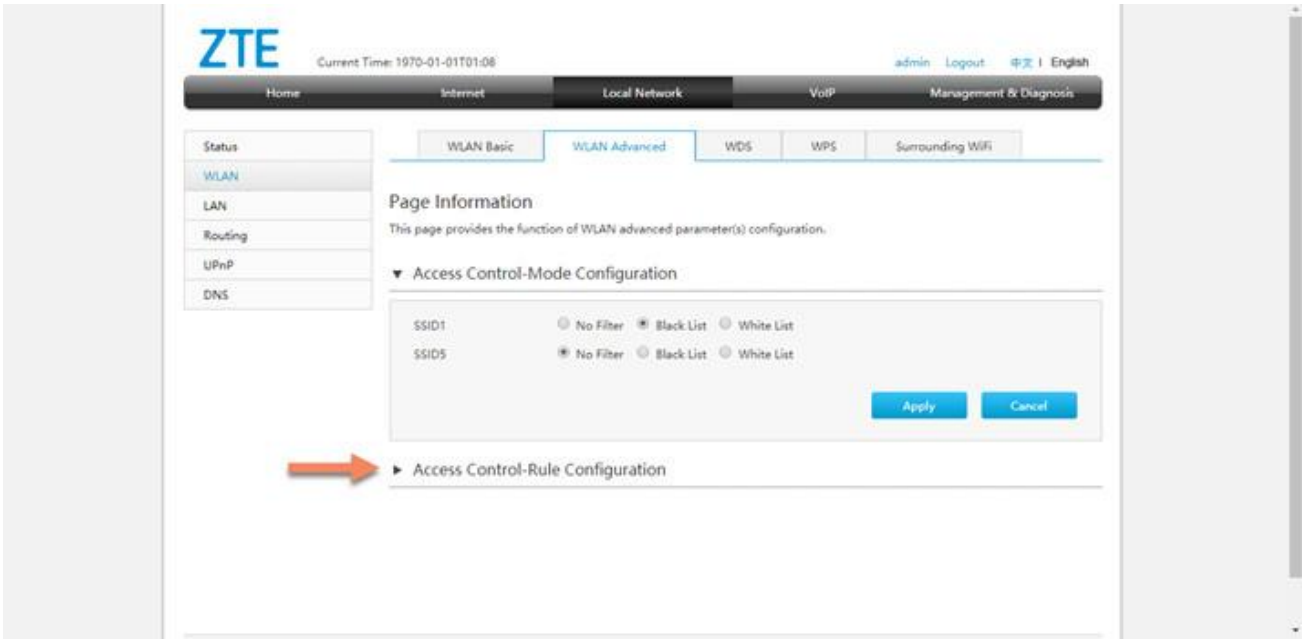

7. Set up as follows:

- Name : enter name
- SSID : select SSID
- MAC Address : enter MAC Address of allow and not allow device
- Press Apply

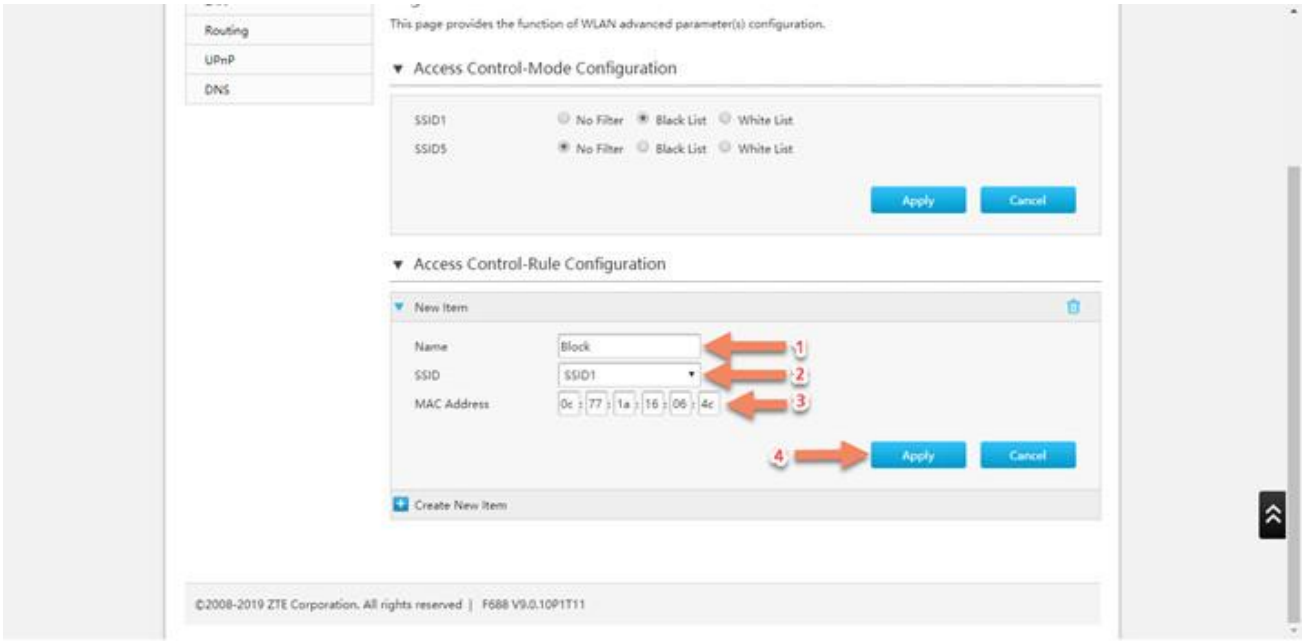

8. Screen after setup :
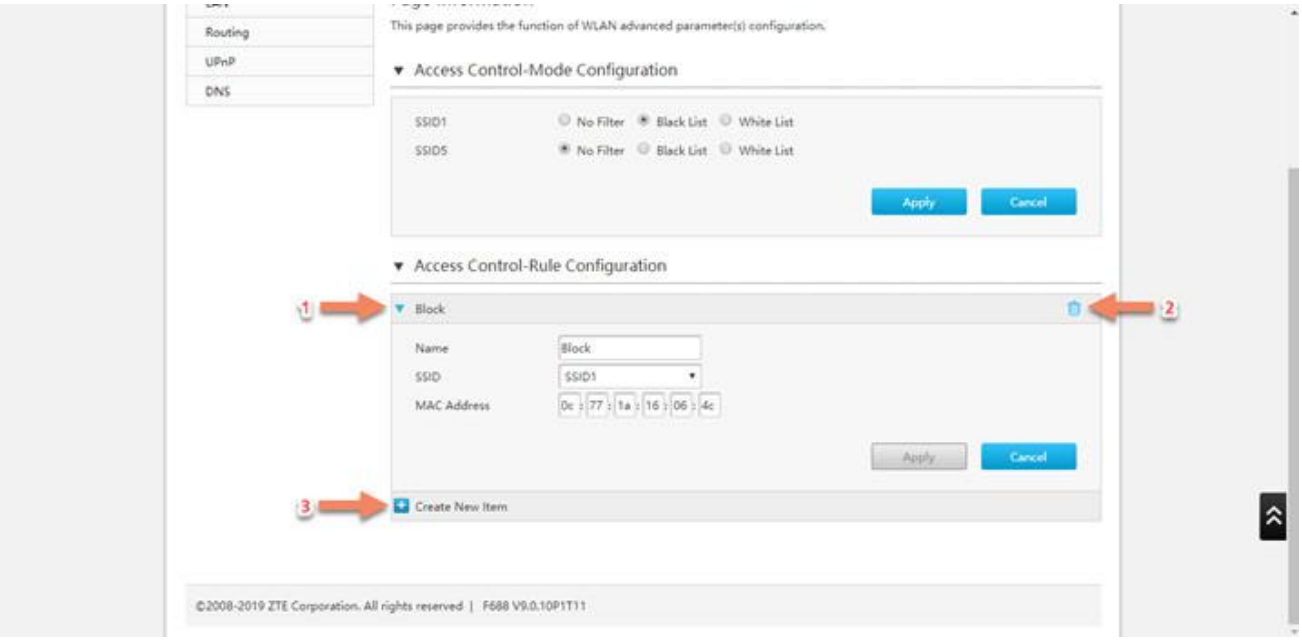
- Name that has been set ex. Block
- A bin sign, to delete setup parameter
- A sign to add Mac Address that you wish to set