



How to add – delete APN for 4G CAR WiFi

Add New APN

1. At Home screen, choose Huawei HiLink App
2. Choose Gear sign on the top right corner (Settings)

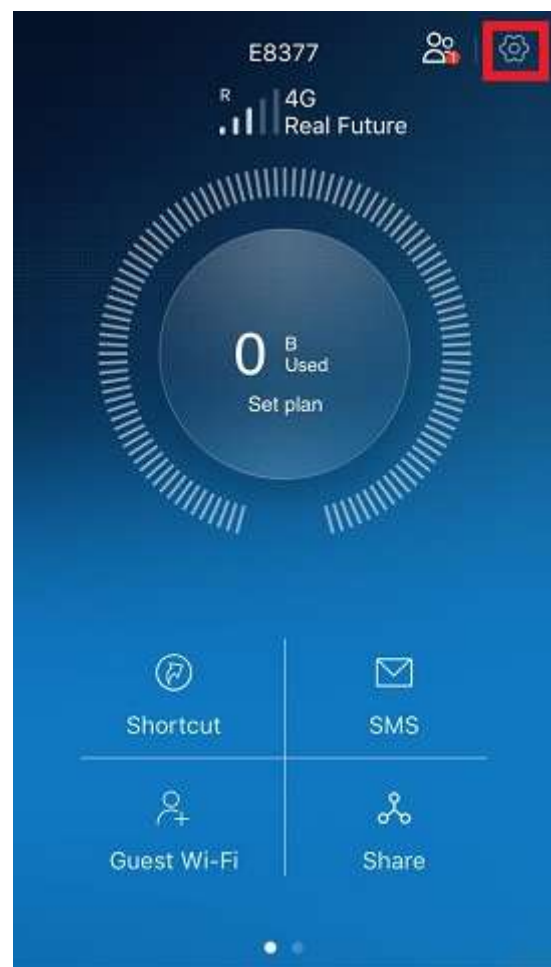

3. At Settings page, choose Network 4. At Network Settings, choose APN

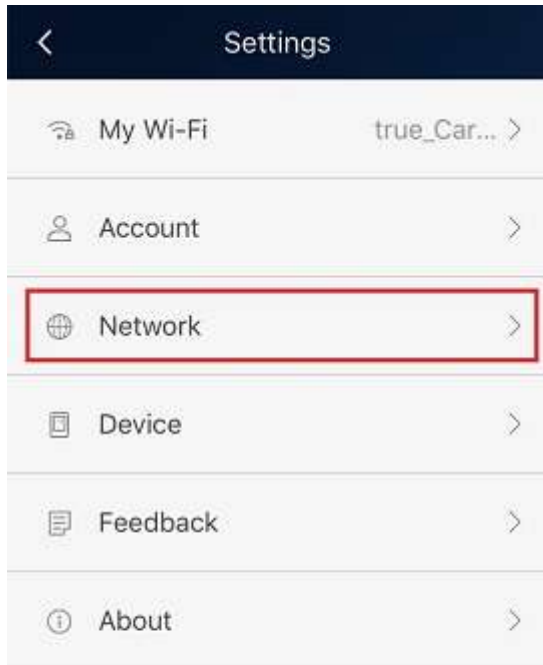


5. APN management page, you'll find APN "True" as default setting. To check, tap on True
6. "True" APN will appear, tap a check mark on top right corner to OK and back to APN management again



7. Back to APN management



8. To add new APN, choose New at + sign below

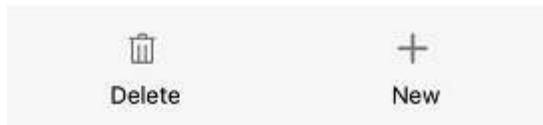

9. APN settings page for entering information




10. Enter the information

- Name = enter preferred name e.g TrueMoveH Internet
- APN = internet (lowercase)
- User name = true (lowercase)
- Password = true (lowercase)



11. Tap on a check mark (top right corner) to save
12. TrueMoveH Internet with notified message 'default'

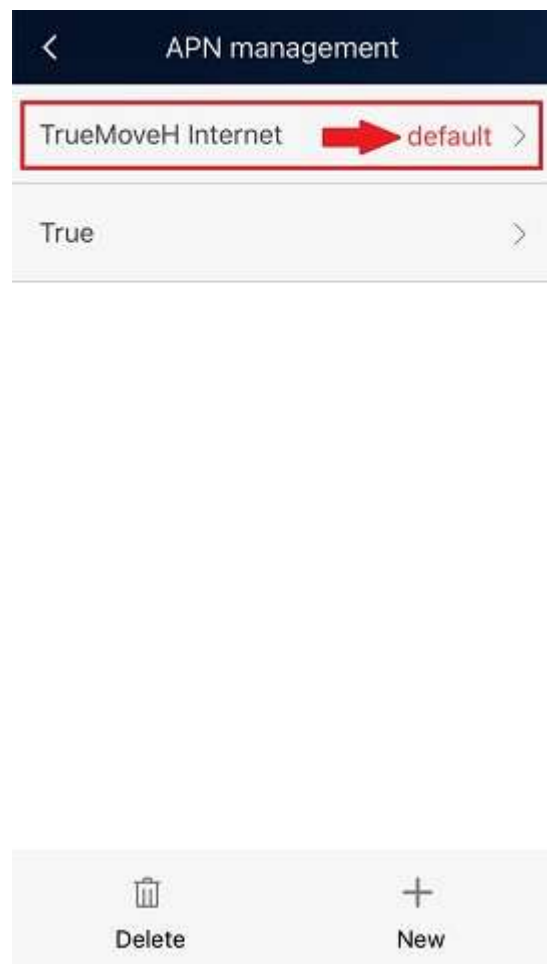


13. If there're many APN, to use that APN, tap on a check mark (top right corner) to use. 'default' will appear behind that APN




Delete APN

1. To delete APN, choose Delete sign below

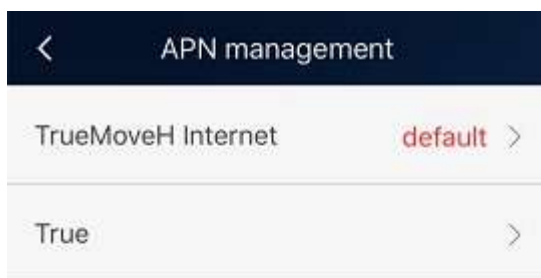


2. Delete page, there'll be Delete sign in front of APN, tap on the sign to delete


*APN "True" cannot be deleted because it is set by default along with Device's Firmware

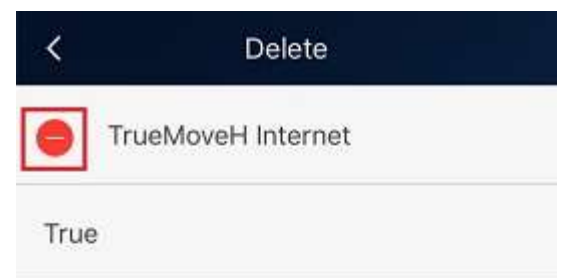

3. Tap on 'Delete' to delete APN

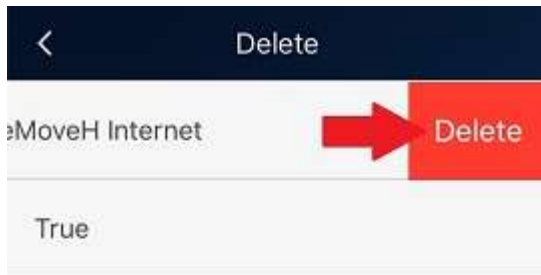

4. That APN will disappear,
tap on < sign on the top
left corner

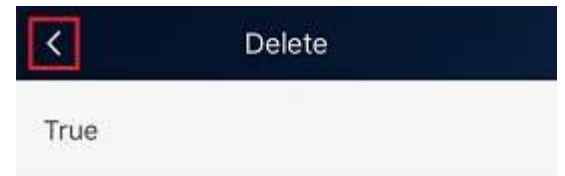

5. Back to APN management again,
deleted APN will disappear from this
page

