

How to set up Auto Internet and MMS APN on True Lenovo 4G A6000

1. Go to 'Settings'




2. Tap at 'Mobile data'



3. Select 'Access Point Names'




4. 'APN' page

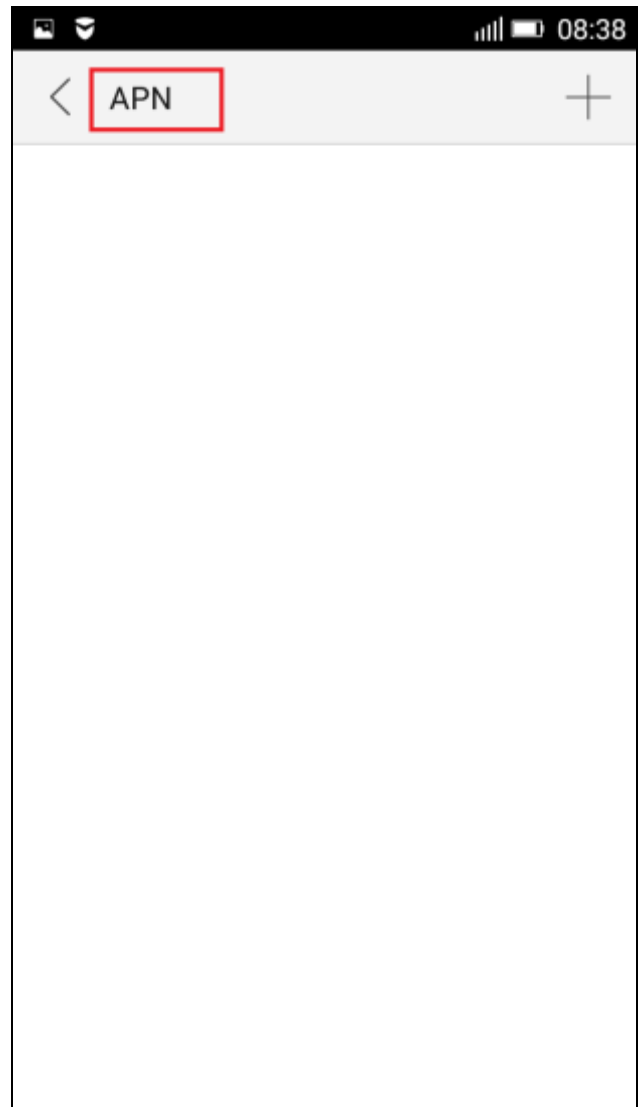


5. Press 'Menu' button at bottom left corner



6. Select 'Reset to default'

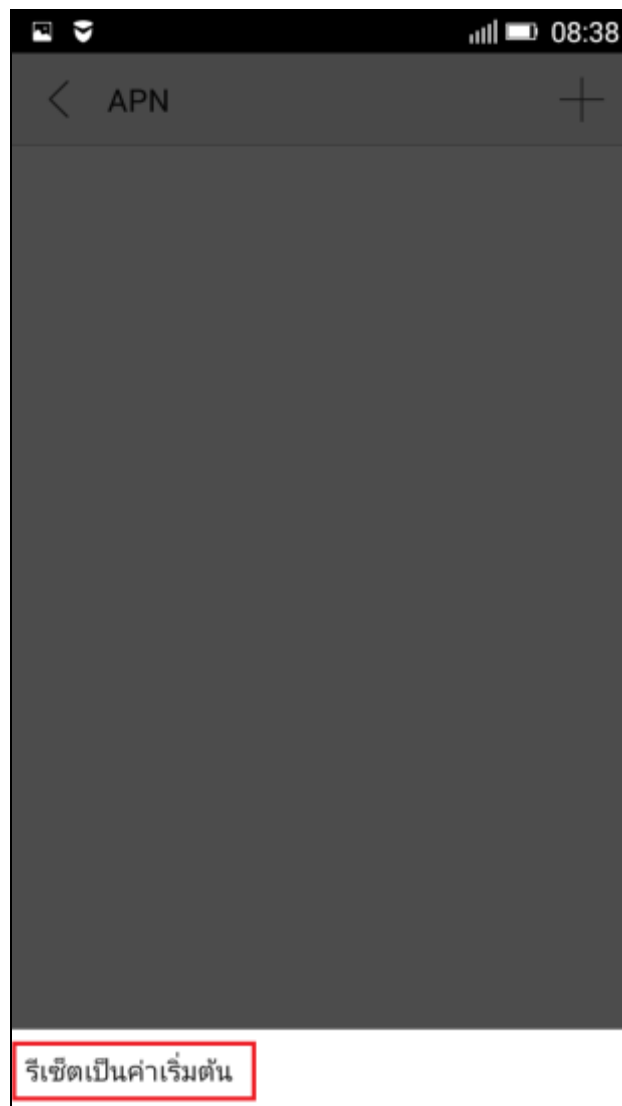

7. TRUE-H INTERNET and TRUE-H MMS will appear

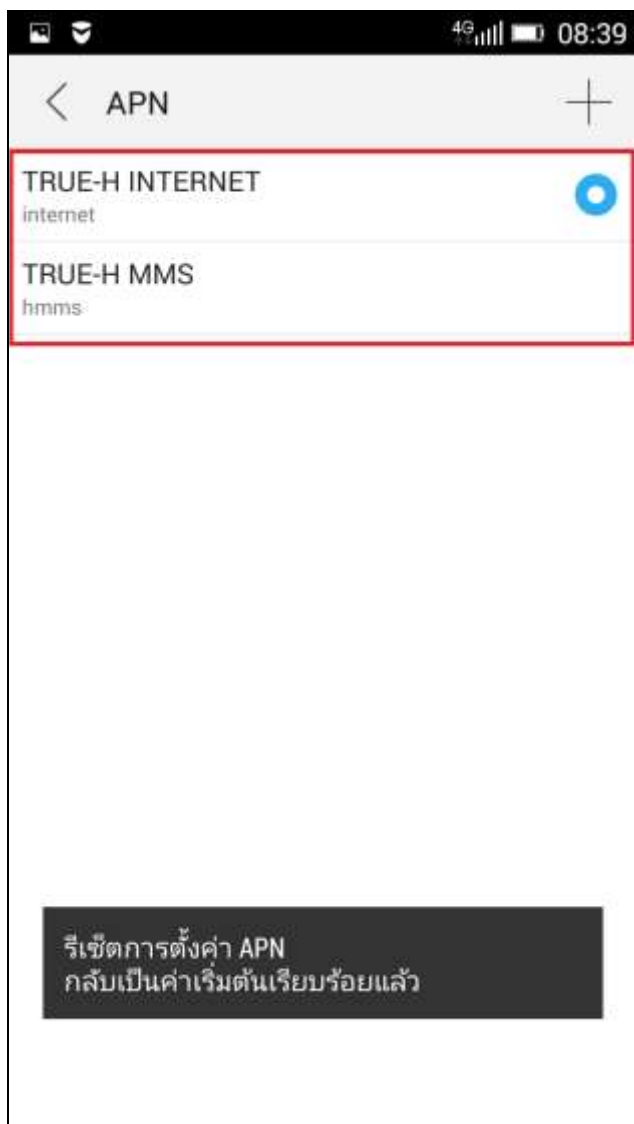

8. On the top right corner, 4G or H/H+ (3G) shown while being in service area

